

Sprint PCS.[®]

The clear alternative to cellular.SM

This phone will work only with service from Sprint PCS, which must be purchased separately. See Terms and Conditions of Service.

©2000 Sprint Spectrum L.P. All rights reserved. No reproduction in whole or in part without prior written approval. Sprint, Sprint PCS, Sprint PCS Phone, Sprint Personal Communications Services, Sprint PCS Wireless Web and the diamond logo are trademarks of Sprint Communications Company L.P. Samsung and SCH-6100 are registered trademarks of Samsung Electronics Co., Ltd. All other trademarks are the property of their respective owners.

Licensed by Qualcomm Incorporated under one or more of the following patents: U.S. Patent No. 4,901,307; 5,056,109; 5,099,204; 5,101,501; 5,103,459; 5,107,225; 5,109,390.

T9[®] is a registered Trademark of Tegic Communications, Inc. and is licensed under U.S. Patent 8, 792, 969.

Phone.com[®] is a registered Trademark of Phone.com, Inc.

RSA[®] is a registered Trademark of RSA Security, Inc.

Yahoo! and My Yahoo! are registered Trademarks of Yahoo! Inc.

Windows[®]95, Windows[®]98 and WindowsNT[®] are registered Trademarks of Microsoft[®] Corporation.

DISCLAIMER OF WARRANTIES; EXCLUSION OF LIABILITY

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Printed in South Korea
GH68-00898A
Version: 1.0

First things first: Read this before you do anything else




Determine if your phone is pre-activated

If you received your Sprint PCS Phone™ in the mail or purchased it at a Sprint PCS Center, your phone may already be activated. If so, it simply needs to be unlocked before you begin using it (see “How to unlock your phone” on page 3).

This guide will introduce you to our technology and your new Sprint PCS Phone through easy-to-follow instructions.

How to activate your phone

There are two ways to activate your phone.

1. The fastest way is to call from your new Sprint PCS Phone.
 - ▶ First, fully charge your battery.
 - ▶ Turn on your Sprint PCS Phone. Make sure you are in a Sprint PCS Service Area (the  icon should not appear in the top line of the display).
 - ▶ Press  *  TALK while in a Sprint PCS Service Area. You will be connected to a Sprint PCS Customer Advocate who will guide you through the activation process.
2. Another option is to call Sprint PCS Customer Care from any phone other than your new Sprint PCS Phone.
 - ▶ Call us toll free at 1-888-715-4588.

What you should know before you call

- ▶ The call may take up to 30 minutes.
- ▶ A credit check will be run.
- ▶ Your Sprint PCS Phone will be ready for use about one hour after this call is finished.





What you should have handy

- ▶ Your new Sprint PCS Phone.
- ▶ The original packaging for your new phone.
- ▶ Your billing address.
- ▶ Your Social Security number or tax ID number.
- ▶ Your driver's license number.
- ▶ Pen and paper to write down your new Sprint PCS Phone Number.


During this call, a Sprint PCS Customer Advocate will collect your information, as well as help you select your Sprint PCS Service Plan. Once you've made all your selections, the advocate will guide you through the activation process.

Displaying my phone number




To display the phone number of your Sprint PCS Phone:

1. Press  to display the Main menu.
2. Press  for Phone Book.
3. Press  for My Phone#.
4. Press  to return to Standby mode.

How to unlock your phone

If you received your phone in the mail, you need to unlock it before you begin making calls. To unlock your phone, simply press  and enter your four-digit lock code, and you'll be ready to begin making calls. This code typically is the last four digits of your Sprint PCS Phone Number, Social Security number, or tax ID number.

How to get help

If you need help please call Sprint PCS Customer Care at 1-888-211-4PCS (4727). You can also press    from your activated Sprint PCS Phone. A Sprint PCS Customer Advocate will answer (24 hours a day, seven days a week) and be happy to assist you.

Our services are provided to you under certain terms and conditions — all of which are listed in the brochure included in your Sprint PCS Phone box.

Table of Contents

First things first:

Read this before you do anything else	1
Determine if your phone is pre-activated	1
How to activate your phone	1
What you should know before you call	2
What you should have handy	2
Displaying my phone number	2
How to unlock your phone	3
How to get help	3

Welcome to Sprint PCS	11
------------------------------	-----------

Getting to know your phone	12
-----------------------------------	-----------

Turning your Sprint PCS Phone on and off	23
---	-----------

To turn it on	23
To turn it off	23

The top line of the display	24
------------------------------------	-----------

Using the battery	27
--------------------------	-----------

Installing the battery	27
Removing the battery	27
Charging the battery	28
Charging with the dual-slot desktop charger	28
The empty battery icon	29

Your phone's modes	30
---------------------------	-----------

Standby mode	30
Talk or In-Use mode	30
Power Save mode	31

Basic voice call functions	32
-----------------------------------	-----------

Making a voice call	32
Redialing calls	32
Correcting dialing mistakes	33
Ending a call	33
Incoming call notification	33
Answering a call	34
Adjusting voice volume	35

Basic voice call functions (continued)	
Adjusting ring volume	35
Silencing (or muting) the ringer during an incoming call	35
Muting the microphone during a call	36
Silent Key	36
Where you can use your phone	36
Setting your phone's roaming ability	37
Roaming call guard	38
What you'll see	38
Voice calling experience	39
Caller ID	39
Call Waiting	40
Three-Way Calling	41
Call Forwarding	42
Displaying your phone number	42
Missed calls	43
Dropped calls	43
Dialing Sprint PCS Directory Assistance	43
Dialing Sprint PCS Operator Services	44
Failed calls	44
Key beep volume setting	44
Advanced voice calling features	45
Tone length setting	45
Automatic hyphenation	45
Prepend dialing	46
Four-digit dialing	47
Pause dialing	48
Storing pauses in an Internal Phone Book entry	48
Pause dialing from a stored Internal Phone Book entry	49
Manual pause dialing	50
Sending your telephone number during a phone call	51
Audible alerts	52
Service alert	52
Minute beep	53

Display options	54
Backlight control	54
Personal greeting	55
Contrast control	55
Setting the language of your phone	56
Displaying your phone's software and hardware versions	56
Displaying your phone's software and hardware version while in-use	57
Ringer options	58
Ringer type setting for voice calls	58
Ringer volume setting for voice and data/fax calls	59
Ringer type setting for message notifications	59
Ringer volume setting for message notifications	60
Ringer type setting for your alarm	61
Ringer volume setting for your alarm	61
Ringer type setting for data/fax calls	62
Ringer type setting for roaming calls	62
Voice memo	63
Recording a voice memo	63
Reviewing a voice memo	64
Voice-activated dialing	65
Tips on recording names	65
Programming the phone for voice-activated dialing	65
Setting-up voice-activated dialing	66
Placing a call using voice dialing	67
Reviewing voice dialing entries	67
Erasing voice dialing entries	68
Emergency dialing	69
Calling 911	69
The Internal Phone Book	70
Viewing stored entries	70
Storing phone numbers and names	72
Adding a new phone number to an existing entry	73
Shortcuts for storing phone numbers	74
Displaying my phone number	74
Storing phone numbers at the end of a call	74
Prepend a phone number	75
Adding a Name Ringer	76



Changing Your Internal Phone Book	77
Editing Internal Phone Book numbers	77
Secret Internal Phone Book numbers	78
Erasing Internal Phone Book entries	78
Erasing the Internal Phone Book	78
Set Speed Dial	79
Dialing numbers from your Internal Phone Book	80
Shortcuts to Memory Dialing	80
Internal Phone Book services	81
Using your Internal Phone Book while your phone is In-Use	82
Calendar	83
Today	83
Month View	85
Jump To Date	86
To Do List	87
Count Down	88
Alarm Clock	89
World Clock	91
Calculator	92
Using your Calendar while your phone is In-Use	93
Sprint PCS Voicemail	94
Setting up your Sprint PCS Voicemail box	94
Reviewing Sprint PCS Voicemail messages	94
One-Touch Access to your Sprint PCS Voicemail box	95
Messaging	96
Incoming messages	96
Reviewing Numeric Pages and Sprint PCS Wireless Web Messages	97
Message options	98
Erasing individual messages	99
Erasing all Page/Text or Wireless Web messages	99
Message ringing	99
Message memory capacity	100
Messages and Lock mode	100
Checking Messages while your phone is In-Use	100

Your phone's security features	101
Lock mode	101
Lock code setting	102
Locking the phone	102
Dialing in Lock mode	103
Special numbers	103
Storing special numbers	104
Dialing special numbers in Lock mode	104
Resetting your phone	104
Erasing Your Internal Phone Book	105
Keeping track of your calls	106
Reviewing Outgoing, Incoming or Missed Calls	106
Erasing Call Logs	107
Reviewing airtime	108
Keeping track of your calls while your phone is in-use	109
The Sprint PCS Wireless Web Browser	110
The Sprint PCS Wireless Web Start and End Prompts	111
Launching the Sprint PCS Wireless Web Browser	111
Ending a Sprint PCS Wireless Web Browser Session	112
Navigating the Sprint PCS Wireless Web Browser	113
The Sprint PCS Wireless Web Browser soft keys	114
Using Links	116
Initiating a phone call while using the Sprint PCS Wireless Web Browser	116
Receiving a phone call while using the Sprint PCS Wireless Web Browser	116
Using Bookmarks	117
Creating a Bookmark	117
Finding a Bookmark	117
Entering text, numbers or symbols	118
Alphabetical Text Entry	118
Numbers and Symbol Entry	119
T9® Text Entry	119
Sprint PCS Wireless WebSM Connection	120
Getting Started	120
Attaching the data cable	121
Installing the software	121

Placing a call	121
Reading the Display	121
During the call	122
Receiving a call	122
Receiving a fax call	123
Changing your phone back to voice calling	124
Ending a call	124
Sprint PCS Wireless Web Updates	125
Menus	126
Main menu	126
Talk or In-Use menu	126
Menu navigation	127
Your Phone's Main menu	128
Usage guidelines:	
All about performance and safety	129
Keeping tabs on signal strength	129
Understanding Power Save mode	129
Understanding how your phone operates	129
Radio frequency safety	130
Emergency Calls	131
Maintaining your phone's peak performance	131
Using your phone while driving	132
Following safety guidelines	132
Restricting children's access to your phone	132
Turn off your phone before flying	133
Turn off your phone in dangerous or posted areas	133
Using your phone near other electronic devices	134
Cautions	135
FCC notice	135
Liquefied Petroleum Gas	135
Specifications Subject to Change	135
FCC Compliance Information	136
Information To User	136
Battery and specifications	137
Protecting your battery	137
Battery disposal and recycling	138
Sprint PCS Phone and battery specifications	139
Index	140

Welcome to Sprint PCS

Sprint PCS built the only all-digital, all-PCS nationwide network from the ground up for clearer calls, serving more than 280 major metropolitan areas. We've built our network to give you what we believe you really want from a wireless phone: clear sound, private conversations, and time-saving features. But Sprint Personal Communications Services® also has the potential to do something even more far-reaching – simplify your life. Our advanced technology is designed to grow with your communications needs so you will be able to rely on your phone to stay in touch.


This user guide will introduce you to our technology and your new Sprint PCS Phone through easy-to-follow instructions. For additional help, just stop by any Sprint PCS Center, call Sprint PCS Customer Care by pressing  *  TALK , or call 1-888-211-4PCS (4727).

Thank you for choosing Sprint PCS.


Getting to know your phone



Getting to know your phone (continued)

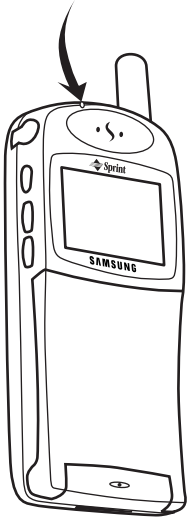


- 1. LED Indicator:** Flashes to indicate an incoming call or message. When you have the phone closed and the ringer set to off, the LED indicator will notify you that you have an incoming call or message.
 - ▶ Lights up (flashes) for a few seconds when you turn on the phone.

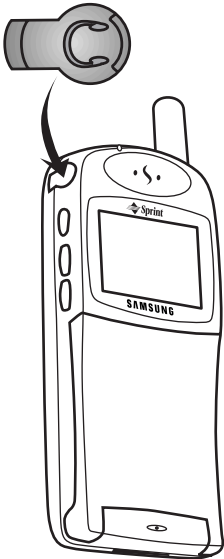


- 2. Headset Connector:** This is where you connect the optional headset. The headset includes an earpiece and microphone in a convenient, lightweight unit so you can converse without using your hands.
 - ▶ What you see in the illustration to the left is really the cover for the headset connector. Gently pry open the top of the cover to expose the headset connector.

Getting to know your phone (continued)

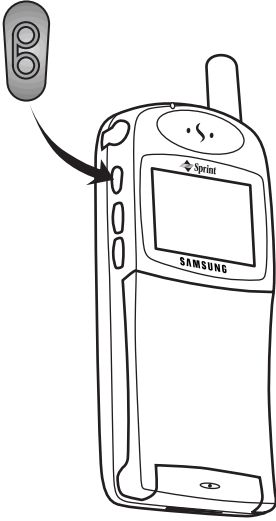

3. **Voice Memo Key:** From Standby mode:


- ▶ Press and hold it to record up to 60 seconds of audio.
- ▶ A total of five minutes of audio can be recorded in five separate (one minute) Voice Memos. Each Voice Memo can be stored indefinitely or erased.
- ▶ From Standby mode, press briefly to view the Voice Memo menu.

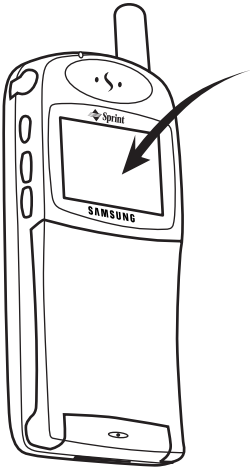

4. **Backlit Display Screen:** The backlight lights when you receive an incoming call. The display screen contains two areas:

- ▶ The top line display indicators appear based on your phone's operating mode (see "The top line of the display" on page 24).
- ▶ The lower area displays:
 - ▶ In-use information such as the other party's number, the call timer, the name and number of the other party (if available), Call Waiting, Mute, etc.
 - ▶ Menus and sub-menus.


Getting to know your phone (continued)

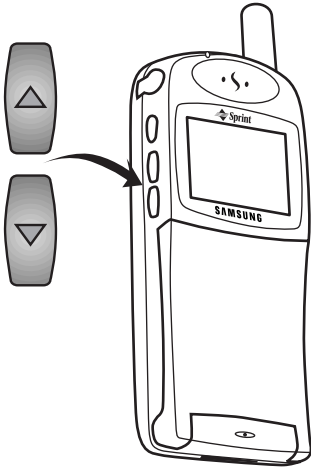

5. Volume/Scroll Keys: There are two keys (one up and one down) that are used to set the ringer volume, set audio volume levels and to navigate through the menus.

Press the volume/scroll key to:

- ▶ Adjust voice volume during conversation.
- ▶ Adjust ringer volume in Standby mode.
- ▶ Mute the ringer during an incoming call.
- ▶ Scroll through menu options one page at a time.

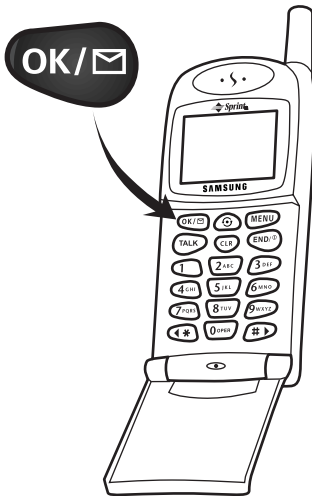

6. OK / Messages Key: This key performs several useful functions:

- ▶ From Standby or Talk mode, press it briefly to access the Messages menu.
- ▶ From Standby mode, press and hold it to access Sprint PCS Voicemail.
- ▶ When entering a phone number, press it once to save the number to the Internal Phone Book (then follow the prompts).
- ▶ When navigating a menu, press it to select the highlighted item.
- ▶ When the alarm goes off, press it to silence the alarm.

Getting to know your phone (continued)




- 7. TALK Key:** This key performs several useful functions.
- ▶ Press it to answer calls.
 - ▶ Dial a number and press it to connect.
 - ▶ During conversation press it to:
 - ▶ Initiate Three-Way Calling.
 - ▶ Answer a Call Waiting call.
 - ▶ Press it once in Standby mode to view your last five incoming, outgoing, and missed Call Logs.
 - ▶ Press it twice in Standby mode to redial the last outgoing number.
 - ▶ Press and hold to use voice-activated dialing.




- 8. Backlit Keypad:** Keys are lighted from the back for maximum visibility.
- ▶ Backlight for keys and display can be set to one of four settings: Flip Open, 30 Seconds, 8 Seconds, or Off.

Getting to know your phone (continued)

9. * / Scroll Key:

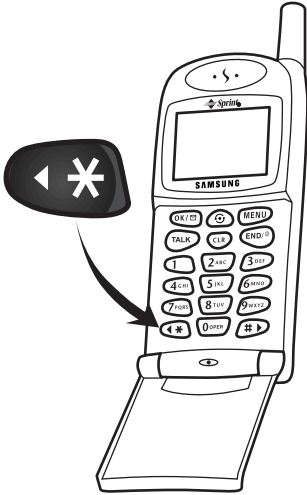


- ▶ When entering or editing text, this key allows you to move the cursor, without erasing characters (see “Using Links” on page 116).
- ▶ Press ◀* for special star calling features.
- ▶ Allows scrolling when viewing menus, the Internal Phone Book, Sprint PCS Wireless Web Browser, etc.

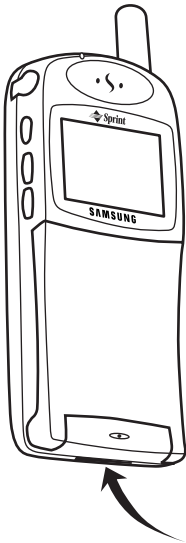

- ### 10. Accessories Connector:
- This is where you connect your charging device. It can also be used to connect the Sprint PCS Wireless Web™ Connection kit or hands-free car kit (both sold separately).
- ▶ Remove the rubber plug before first use.


Getting to know your phone (continued)

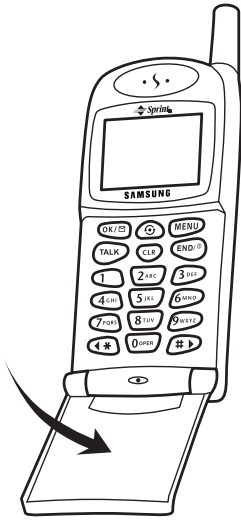

11. Active Flip: Closing your flip ends a call and turns off the backlight.

There are several options you can set when you open the flip:

- ▶ Answer an incoming call. To set this option, see “Answering a call” on page 34.
- ▶ Voice-activated dialing of stored entries. To set this option, see “Setting-up voice-activated dialing” on page 66.
- ▶ Control the backlight. To set this option, see “Backlight control” on page 54.

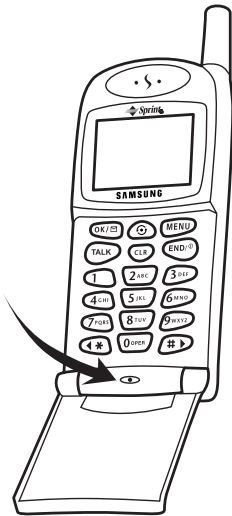


12. Microphone: Your typical voice microphone for conversation, but also:

- ▶ Accepts your voice commands for voice-activated dialing.
- ▶ Records your speech for voice memos.
- ▶ You can mute the microphone during a call by simply pressing

MENU **OK/END** or **MENU** **1**.

Getting to know your phone (continued)

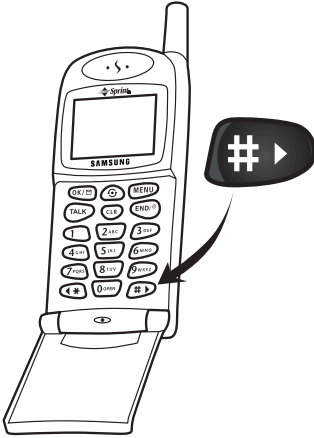

- 13. # / Scroll / Space Key:** This key has several useful functions:
- ▶ This is the pound key. It's used at various times when you dial, especially when using telephone access services.
 - ▶ When entering text, press it to create a space.
 - ▶ Allows scrolling when viewing menus, the Internal Phone Book, Sprint PCS Wireless Web Browser, etc. and to move the cursor when editing any option or text.



- 14. 0 / Next Key:**
- ▶ This key is used to display the next matching word when entering text in T9 Text Entry mode.

Getting to know your phone (continued)




- 15. CLR Key:** This key is used to erase numbers or characters you may have entered incorrectly, or to return to a previous screen.
- ▶ To erase one character from the display screen, press it once.
 - ▶ To erase all characters, hold it down for one second.
 - ▶ To back up one menu level, press it once.
 - ▶ To return to Standby mode from any menu, hold it down for one second.
 - ▶ To back-up one menu level during a Sprint PCS Wireless Web session.




- 16. END/ Power Key:** This key performs several important functions:
- ▶ Press to turn on your phone.
 - ▶ Press and hold to turn off your phone.
 - ▶ Press this key to disconnect a call or to return to Standby mode from any menu.
 - ▶ If the phone is already open, and you receive an incoming call, you can mute the ringer by pressing once.

Getting to know your phone (continued)

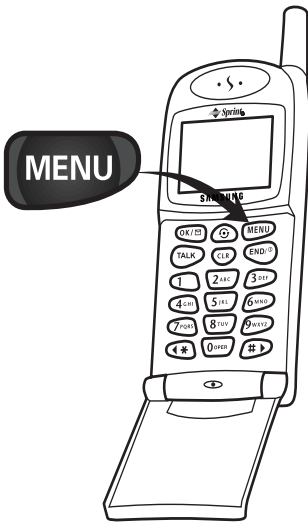

17. MENU Key: When in Standby or Talk mode, press this key to access menu items, and continue pressing it to scroll through menu items. When you reach the menu item you want, press **OK/END**. Several other menus can be accessed by pressing this key (see “Menus” on page 126).


- ▶ When entering text, press to select text entry modes (see “Using Links” on page 116).

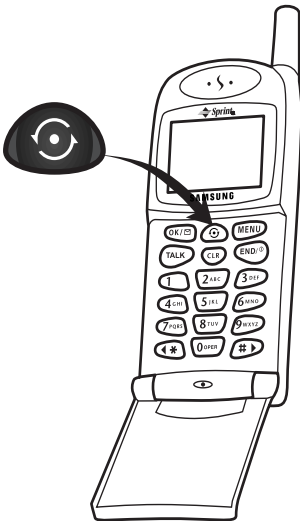


18. Navigation Key: This key allows you to scroll when viewing menus, the Sprint PCS Wireless Web Browser, Internal Phone Book, etc. and to move the cursor when editing any option.

- ▶ In Standby or Talk mode, press this key to view your Internal Phone Book (in alphabetical order).
- ▶ Use to change case when entering text (“Using Links” on page 116).

Getting to know your phone (continued)

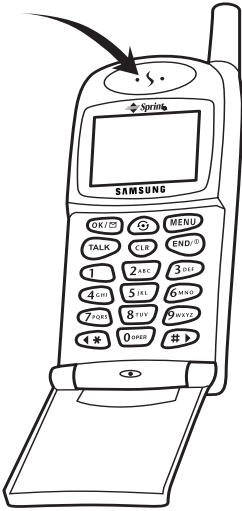


19. Speaker: Speaker for listening to conversations and voice message prompts.

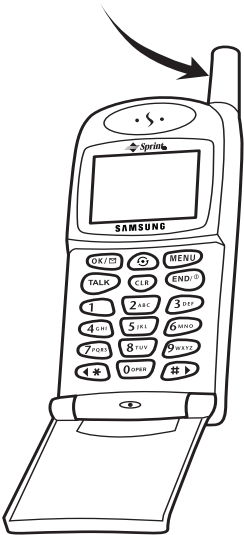


20. Antenna: Fixed length for convenience and maximum clarity.


Turning your Sprint PCS Phone on and off



To turn it on

When you're ready to turn your phone on, simply press  and three things happen:

- ▶ The LED indicator flashes,
- ▶ the phone beeps and
- ▶ the start-up graphics begin to play.

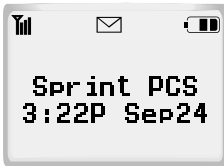
The phone will then begin searching for a network signal. When a signal is found, the  icon appears and your phone enters Standby mode. The Standby mode screen is shown below and always contains the following four things:




- ▶ Signal strength indicator .
- ▶ Battery strength indicator .
- ▶ Banner (here the banner is "Sprint PCS" but you can personalize it).
- ▶ Time and date.

You can make and receive calls now.


To turn it off


To turn your phone off, press and hold  until the power off graphics begin to play. The phone beeps and the display goes blank. Notice that when the phone is off, nothing is displayed on the screen, and the backlight is off.


Note: If your phone is on and  is pressed for less than one second, the phone will not turn off. This feature helps keep your phone from being accidentally turned off.


The top line of the display

Display indicators (or icons) appear across the top of your phone's display screen. The signal strength and battery strength icons will always appear, but other icons appear based on your phone's operating mode.

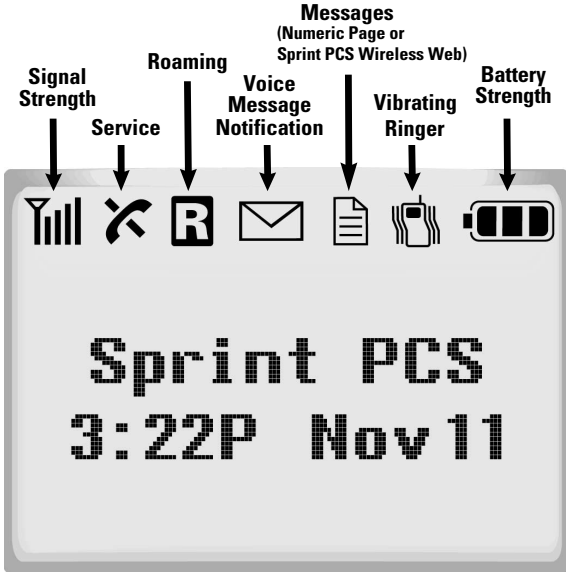


 **Signal strength:** This icon always appears when your phone is on, and shows your current signal strength. More lines indicate more signal strength. Four lines indicate maximum strength, and one line indicates least strength.




 **Service indicator:** This icon indicates a call is in progress. If there is trouble with signal strength, this indicator will have a diagonal line through it.



 **No service indicator:** This icon indicates your phone cannot find a signal because you're outside a service area. When this indicator displays, you cannot make or receive calls. Wait a little while for a signal or move into an open area.


Note: The no service indicator will always appear when you turn on your phone. As soon as service is found, the indicator disappears.

 **Roaming:** This icon indicates you are “roaming” off the Sprint PCS Digital Network. If you are:

- ▶ In your home service area, this indicator will not display.
- ▶ In a preferred digital roaming area (where Sprint PCS has a roaming agreement in place), this indicator will be steady on, but not flashing.
- ▶ In a digital coverage area that is not covered by a Sprint PCS roaming agreement, this indicator will flash once every second.

 **Message indicator:** This icon indicates you have a voicemail message(s) waiting. Press  to see the Message menu, or press and hold  to be connected to Sprint PCS Voicemail.

 **Message indicator:** This icon indicates you have a message(s) waiting. The message(s) can be either numeric page(s) or Sprint PCS Wireless Web Message(s). Press  to see the Message menu.

 **Vibrating Ringer:** This icon indicates that an incoming call will vibrate the phone rather than ring it. This feature can be used for quiet situations where you don't want your ringer to disturb others or for loud situations where the ringer cannot be heard.




Battery strength: This icon is always displayed when your phone is on, and shows the level of your battery charge. The more black bars you see, the greater the charge. When the battery becomes very low, an empty box appears and the phone flashes an alert; this indicates your phone is about to turn itself off.

Using the battery

Your Sprint PCS Phone comes packaged with a partially charged, rechargeable Lithium Ion (LiIon) battery so that you can use your phone immediately after it is activated.

Installing the battery

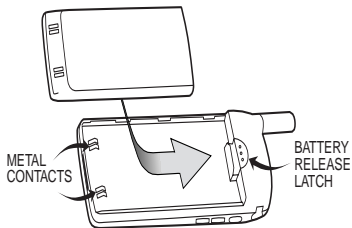


To attach the battery to your Sprint PCS Phone:

1. Hold the battery so that the metal contacts on the base of the battery line up with the metal contacts on the base of the phone.
2. Place the battery on the back of the phone with the top of the battery about 1/4 inch to 1/2 inch from the latch.
3. Gently push the battery toward the top of the phone until it snaps into place.


Removing the battery

To remove the battery from your Sprint PCS Phone:

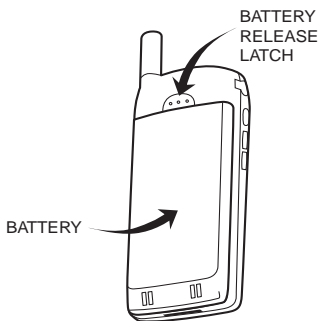

1. Turn the phone off.
2. Press the battery release latch (see illustration) and slide the battery away from the latch.

Charging the battery

You can tell whether or not your battery needs to be recharged by checking the  indicator in the upper-right corner of your phone's display.

Charging with the dual-slot desktop charger

Use only Samsung-approved chargers and adapters with your Sprint PCS Phone. Use of any unauthorized accessories may be dangerous and may invalidate your phone's warranty. Unauthorized accessories may cause damage to the phone or its battery.

To charge the battery using the dual-slot desktop charger:

1. Plug the power cord of the charger into a wall outlet.
2. Select one of the following three charging configurations:
 - ▶ Insert the entire phone with battery attached into the front compartment of the charger.
 - ▶ Insert a single battery (alone, not attached to the phone) into the rear compartment of the charger.
 - ▶ Insert a single battery into the rear compartment and a phone (with battery attached) into the front compartment.

 
Things to remember about the dual-slot desktop charger

- ▶ To get the quickest charge for any battery:
 1. Turn the phone off.
 2. Put the phone, with battery attached, into the front slot.
 3. Do not put a battery in the rear slot.

- ▶ When two batteries are in the charger, the batteries charge simultaneously, but charging time increases for both batteries.
- ▶ Leaving the battery in the charger once it is fully charged does not harm the battery.
- ▶ The LEDs on the front of the charger indicate the following:
 - ▶ Red indicates that the battery is charging.
 - ▶ Green indicates that the battery is fully charged.
 - ▶ Yellow indicates that the battery is operating at a temperature that is too high or too low, or that there is a poor or improper connection. Check the charger and battery for proper connections.

Using the dual-slot desktop charger, a completely discharged standard battery recharges fully in approximately 2.5 hours when placed in front slot, 4 hours when placed in the rear slot. The extended battery recharges in approximately 3 hours when placed in front slot, 4 hours when placed in the rear slot.

The empty battery icon

Two to three minutes before the battery charge level gets too low to operate the phone, the battery sensor will let you know by blinking an empty battery icon (), sounding a tone and displaying a warning message. If you continue to operate the phone without charging, the phone will turn off automatically (after the two to three minute delay). If this happens your call will be ended. If you plug into a charging device, you can continue your call. Be sure to monitor the battery strength icon and make sure your battery is adequately charged.

Your phone's modes

Standby mode

Standby mode is the basic state of your Sprint PCS Phone. The phone goes into Standby mode soon after you turn it on, or if your phone is on, whenever you briefly press **END/⓪**. When your phone is in Standby mode, you will see the banner (the message displayed when you turn on your phone), the time/date and the active top line icons. While in Standby mode, you can enter a phone number, press **TALK** to dial it, or press **OK/☑** to save it in the Internal Phone Book.

Press **END/⓪** at any time to return to Standby mode. But be careful, if you're on a call when you press **END/⓪**, you'll return to Standby mode but you'll also disconnect the call. Press **CLR** several times or hold it down to return to Standby mode without ending a call.

The Main menu is accessed when you are in Standby mode by pressing **MENU**. See "Your Phone's Main menu" on page 128 for a listing of the Main menu items.

Talk or In-Use mode

You can place and answer calls only when your Sprint PCS Phone is powered on. During a call, the phone is in Talk mode. While you are in Talk mode, pressing **MENU** gives you a list of options referred to as "In-Use options". See "Talk or In-Use menu" on page 126.

Power Save mode



Your Sprint PCS Phone comes with a Power Save feature that will automatically be activated if your phone is unable to find a signal after 15 minutes of searching. While this feature is active, the phone's battery charge is conserved. The phone will automatically recheck for a signal periodically. A message on the display will let you know when your phone is operating in Power Save mode.

Basic voice call functions

Note: Your phone makes voice and Sprint PCS Wireless Web calls. This section explains voice calling only.

Making a voice call


To place a voice call:

1. Press  to power on your Sprint PCS Phone. If you see indicators on the display, this indicates your phone is on. Note that you will not hear a dial tone.
2. Enter the phone number (up to 32 digits) by pressing the digit keys. The phone number displays from left to right.
3. Press . The phone places the call to the entered phone number.

You can also make voice calls:

- ▶ From your Internal Phone Book (see “Shortcuts to Memory Dialing” on page 80).
- ▶ From your Call Logs list (see “Reviewing Outgoing, Incoming or Missed Calls” on page 106).
- ▶ By using One-, Two- or Three-Touch, Four Digit or Speed Dialing (see “Shortcuts to Memory Dialing” on page 80).
- ▶ By using Voice-activated dialing (see “Setting-up voice-activated dialing” on page 66).



Redialing calls

To redial the last call you made, press  twice.



You can also easily redial any of your last ten incoming, outgoing or missed calls by accessing the Call Logs listings (see “Reviewing Outgoing, Incoming or Missed Calls” on page 106).

Correcting dialing mistakes

To correct a misdialed digit:

- ▶ Press  to erase one digit at a time.
- ▶ You can erase all the digits at once by pressing  and holding it down for one second.

Ending a call





To end a call, close the phone or press . When you end a call, the call time (length of the call) displays, along with the name and number of the called or calling party (if available). Also, if the number is not stored in your Internal Phone Book, your phone prompts you to save the number by pressing . To save the number in the Internal Phone Book, follow the screen prompts (see “Storing phone numbers at the end of a call” on page 74). If you do nothing, the phone automatically returns to Standby mode after approximately five seconds.

Incoming call notification

Your Sprint PCS Phone signals an incoming call or message in the following ways:

- ▶ The backlight illuminates.
- ▶ The red LED on the top of the handset flashes.
- ▶ The ringer sounds (unless you have set the ringer to Vibrate or Off).

Incoming call notification continues until one of the following events occurs:

- ▶ You answer the call.
- ▶ You press  , or   to silence the ringer before answering the call.




- ▶ The calling party ends the call.
- ▶ The call is sent to Sprint PCS Voicemail.


Your Sprint PCS Phone provides the following voice call notification features.



- ▶ Six ring volume settings including Vibrate, Off and 1-Beep.
- ▶ Nine unique ring types and four melody tones (see “Ringer type setting for voice calls” on page 58).
- ▶ Name display with Caller ID (if the name is programmed into your Internal Phone Book).
- ▶ Automatic storage of an incoming call’s information in the Call Logs (the last 10 calls you answered are stored in the Incoming Call logs and the last 10 calls you missed are stored in the Missed Call Logs). See “Missed calls” on page 43.

Answering a call

There are three ways to answer an incoming call.

- ▶ Press  if the phone is already open.
- ▶ Open the phone (when the Flip Open option is set in the Main menu).
- ▶ Press Any Key, except  or either volume key  or  when the Any Key Answer option is selected in the Main menu.

Your phone is preset to answer when you press . You can easily change how your phone answers by setting the Call Answer feature as explained here:

1. Press  to display the Main menu.
2. Press  for Setup / Tool.

3. Press **5**_{JKL} for Call Answer.
4. Use the scroll keys to toggle between “Flip Open”, “Any Key”, or “TALK Key”.
5. Press **OK/☒** to save the setting.

Adjusting voice volume

You can adjust the earpiece volume during a call using the volume keys on the side of your phone. Briefly press the up volume key to increase the voice volume or the down volume key to decrease the voice volume.



Adjusting ring volume

From Standby mode you can quickly adjust the volume of the ringer by pressing the volume keys on the side of the phone. Briefly press the up volume key to increase the ringer volume or the down volume key to decrease the ringer volume. You can also change the settings for your phone’s ring volume from the Main menu (see “Ringer options” on page 58).

Silencing (or muting) the ringer during an incoming call

When the phone is open and ringing, press **END**[Ⓣ] to silence the ringer. When the phone is closed and ringing, press one of the volume keys to quickly silence the ringer.






You can also set the ringer to remain off. From Standby mode, press the down volume key until “Ring Volume Off” is displayed, or use the Main menu (see “Ringer type setting for voice calls” on page 58).



Muting the microphone during a call

You can mute the microphone during conversation by selecting the Mute option from the In-Use menu. When Mute is active, “MUTE” displays. The phone resets this condition to the default (Un)Mute setting at the end of your call.

To mute the microphone during a call:

1. During a conversation, press  to display the In-Use menu.
2. Press  (or ) to mute the microphone. You will hear the other party’s conversation, but they will not hear your conversation. “MUTE” displays on the screen.
3. To “unmute” the microphone during the same conversation, repeat steps 1 and 2. Selecting the (Un)Mute option toggles Mute on and off.

Silent Key

The Silent Key feature of your phone silences the key beep tones during the current phone call (this option is available during a phone call only). To activate Silent Key during a phone call, press  .

Where you can use your phone

Your Sprint PCS Phone is singleband. It can be used to make and receive calls in many places:

- ▶ In any city where Sprint PCS provides service.
- ▶ On other CDMA networks where Sprint PCS has implemented roaming agreements.

When you use your phone outside the Sprint PCS Network, it’s called roaming. If you’re roaming in an area where Sprint PCS has roaming agreements in place with a digital

CDMA service provider you will pay the roaming rate plus long-distance charges, where they apply.

Note: In areas where Sprint PCS does not have roaming agreements in place, you will still be able to make (but not receive) calls using a credit card. This is called manual roaming.

Setting your phone's roaming ability

Your Sprint PCS Phone allows you to control your ability to roam. The roaming ability is determined by the “mode” that you select in the Main menu.

The two service modes are:

- ▶ **Automatic:** The phone will search for Sprint PCS service first. When Sprint PCS service is not available, it will search for an alternate system automatically.
- ▶ **Sprint PCS:** This setting allows your phone to operate only on the Sprint PCS Nationwide Network and prevents roaming.

To select the service mode:

1. Press **MENU** to display the Main menu.
2. Press **4.GHI** for Roaming.
3. Press **1** for Set Mode.
4. Press the scroll keys to view options.
5. When the desired service mode displays, press **OK/☐** to save the setting or **CLR** to exit without saving.

Roaming call guard

Your phone can be set to display a confirmation message when a roaming call is about to be placed or received. This is helpful if you want to avoid roaming charges. To change your roaming call guard setting:

1. Press **MENU** to display the Main menu.
 2. Press **4.GHI** for Roaming.
 3. Press **2.ABC** for Call Guard. The message “Extra step required to make or take roam calls” briefly displays.
 4. Select Yes or No using the scroll keys.
 5. When the desired setting displays, press **OK/☐** to save the setting or **CLR** to exit without saving.
- ▶ If you selected “Yes”, the message “Extra key press required for roam calls” briefly displays.
 - ▶ If you selected “No”, the message “No extra step to make or take roam calls” briefly displays.

What you'll see

You should always check your phone's display because it will let you know when you're outside the Sprint PCS Nationwide Network.

- ▶ Sprint PCS Network - **R** is not displayed
- ▶ Other CDMA Networks - **R** displays

Note: Always dial using 11 digits (1+ area code + number) when calling from outside your Sprint PCS Home Service Area.

Voice calling experience

When you use your phone on other CDMA networks, your calling experience and call quality will be similar to what you experience when making calls from within the Sprint PCS Network. Although certain voice-calling features may not be available, your phone calls are still private and secure.

If you're on your phone and leave a Sprint PCS Service Area, your call will be dropped. When reentering a Sprint PCS Service Area while on a roaming call, end the call, and then turn your phone off and on again to acquire Sprint PCS Service.

If you need customer service while using your phone outside the Sprint PCS Network, dial 1-888-211-4PCS (4727) for Sprint PCS Customer Care.

Caller ID

This feature tells you who is calling you by displaying the caller's number when the phone rings. If a caller's name and number are stored in your Internal Phone Book, the corresponding name also displays. If you call someone who has this feature, your phone number is displayed on their phone. Your phone displays "P" when receiving a call from a blocked phone number.

To block your phone number from displaying for a particular outgoing call, follow these steps:

1. Press    .
2. Enter the phone number, and then press  .

To activate Block Own Number permanently:

- ▶ Call Sprint PCS Customer Care by pressing    .

To temporarily unblock the number:

1. Press    .
2. Enter the phone number and then press  .



Call Waiting

Call Waiting lets you receive a second call during conversation. When a Call Waiting call comes in, the incoming call alert sounds (this sound is audible to you but not your first caller), and a text notification displays.

Your Sprint PCS Phone provides the option of turning the Call Waiting feature on or off. Call Waiting is on by default. If you choose to have an undisturbed conversation, simply turn off the feature for the current call.

Answering a Call Waiting call




To answer a Call Waiting call:

1. Press  . The phone connects the calling party and places the current party on hold.
2. Press  again to switch between the two parties.


Note: If you do not respond to a Call Waiting notification, the phone logs the call in the Missed Calls Log and then sends the call to Sprint PCS Voicemail.

Disabling Call Waiting

To turn off Call Waiting on your next call:

- ▶ Press    before dialing the number. When you complete your call and hang up, the Call Waiting feature is automatically turned back on.

To turn off Call Waiting permanently:

- ▶ Call Sprint PCS Customer Care by pressing    .

Three-Way Calling

Three-Way Calling lets you talk with two different people at the same time. When you use this feature, you will be charged normal airtime rates for each of the two calls you make. The phone records each called party in the Outgoing Calls Log.

During a three-way call, if one of the callers hangs up, you and the remaining caller will stay connected. If you initiated the call and you hang up first, all three parties are disconnected.

There are two methods for making a three-way call; the TALK key method and by using the In-Use menu.

To place a three-way call using the TALK key method:

1. During a conversation, simply press **TALK**. The phone places the current call on hold.
2. Next, enter the number for the third party, and press **TALK**.
3. When you're connected to the third party, press **TALK** again to begin your three-way call.

To place a three-way call using the In-Use menu:

1. During a conversation, simply press **MENU** and **3^{DEF}** for Three-Way Calling.
2. Next, enter the number for the third party, and press **TALK**. The phone places the current call on hold.
3. When you're connected to the third party, press **TALK** again to begin your three-way call.

Call Forwarding

With Call Forwarding, you can have all of your incoming calls forwarded to another phone number — even if your phone is turned off. When Call Forwarding is used, you can still make calls from your phone.

To use Call Forwarding:

1. Press .
2. Enter the 11-digit phone number (1+ area code + phone number) to which your calls should be forwarded.
3. Press . You will hear a tone that confirms you've enabled Call Forwarding.

Note: Per-minute charges may apply for Call Forwarding.

To disable Call Forwarding: press . Once again, you'll hear a tone confirming the Call Forwarding is disabled.

Displaying your phone number

The phone number of your Sprint PCS Phone displays every time you turn on your phone. You can easily display your phone number by two methods.

To view your phone number from Standby mode:

1. Press to display the Main menu.
2. Press for Phone Book.
3. Press for My Phone #.
4. Press or to return to the previous screen.

To view your phone number while in a conversation:

1. Press to display the In-Use menu.
2. Press for Phone Book menu.
3. Press for My Phone #.

Missed calls

Your phone keeps a list of calls that you do not answer when the phone is on and service is available. The phone indicates a missed call by displaying a message on the screen.

Additionally, if caller information is available, a Missed Call Log entry is created, and the screen displays the phone number of the most recent missed call. If the phone number of a missed call matches a number stored in your Internal Phone Book, the name of the caller displays in addition to the phone number.

When you have missed a call:

- ▶ Press **TALK** to call the displayed number.

To view a list of your missed calls, see “Reviewing Outgoing, Incoming or Missed Calls” on page 106.

- ▶ Press **CLR** to clear the “Missed Call” message from the display and return to Standby mode.

Dropped calls

A dropped call can occur during a conversation in response to a signal fade or leaving a service area. In this case, the call ends and “Signal Faded” displays.

Press **END/D** to clear the message and return to Standby mode.

If the dropped call was an outgoing call from your phone, you can redial the number automatically by pressing **TALK** twice.

Dialing Sprint PCS Directory Assistance

Dial **4GH 1 1 TALK** to obtain residential, business and government listings; to get help completing local or long-distance calls; or to obtain movie listings, hotel, restaurant and shopping information and major local event information.

Dialing Sprint PCS Operator Services

Dial **0**_{OPER} **MENU** **2**_{ABC} to obtain assistance in placing collect calls or calls billed to a local telephone calling card or a third party.

Failed calls

A failed call can occur if your Sprint PCS Phone is out of calling range or the network is temporarily busy. Your phone responds to a failed call by displaying an appropriate text message: "Call Not Completed Out of Range".

Cancel the call attempt and return to Standby mode by pressing **END/∅** or **CLR** and try the call again later.

Key beep volume setting

The keys on your phone beep when they are pressed. The volume of the beeps can be easily set to one of three levels. If you don't want the keys to beep at all, you can turn them off.

To set the key beep volume:






1. Press **MENU** to display the Main menu.
2. Press **8**_{TUV} for Setup / Tool.
3. Press **1** for Sounds.
4. Press **3**_{DEF} for Key Beep.
5. Press the scroll keys to view and listen to the key beep volume options: High, Med, Low or Off.
6. When the desired volume level displays, press **OK/☐** to save the setting.

Advanced voice calling features

Tone length setting

The tone length setting enables you to select short or long DTMF (dual-tone multi-frequency) tones. DTMF tones are sent by your phone to access teleservices (such as a bank account or voicemail system). The system used by the bank or other service determines if you need short or long DTMF. If the service is digital, short DTMF tones will almost always work. However, some new systems and almost all older (analog) systems require you to use long DTMF tones.

To set tone length:

1. Press  to display the Main menu.
2. Press  for Setup / Tool.
3. Press  for Sounds.
4. Press  for Tone Length.
5. Press the scroll keys to toggle between Short and Long.
6. When the desired option displays, press  to save the setting.

Automatic hyphenation

Automatic hyphenation follows the North American Numbering Plan, which hyphenates numbers as follows:

- ▶ 800-555-1234

Prepend dialing

The Prepend option lets you add digits such as area codes and network feature activation codes (for example, to temporarily cancel call waiting) to a phone number that is stored in your Internal Phone Book or Call Logs. To prepend existing phone numbers in the Internal Phone Book:

1. Press **MENU** to display the Main menu.
2. Press **2^{ABC}** for Internal Phone Book.
 - ▶ Remember you can access the Internal Phone Book by Name simply by pressing **☺**.
3. Find the number that you want to prepend; press **1** to Find Name or press **4^{GHI}** to Find Entry.
4. Press **☺** to scroll to the number/person you want to prepend and press **OK/☑**.
5. Press **OK/☑** or **MENU** for more options.
6. Press **4^{GHI}** for Prepend.
7. Enter the prepend digits (area code or feature activation code) by pressing the digit keys. For feature calls, press **◀*** before dialing the feature code.
8. Press **TALK** to call the prepended number.

To prepend a phone number from your Call Logs:

1. Press **MENU** to display the Main menu.
2. Press **1** for Calls.
3. Press:
 - ▶ **1** to prepend a number in the Outgoing Call Log.
 - ▶ **2^{ABC}** to prepend a number in the Incoming Call Log.
 - ▶ **3^{DEF}** to prepend a number in the Missed Call Log.

4. Using the navigation keys, scroll to the number/person you want to prepend and press **OK/☑**.
5. Press **OK/☑** or **MENU** for more options.
6. Press **3^{DEF}** to Prepend.
7. Enter the area code or feature activation code by pressing the digit keys. For feature calls, press **⏪*** before dialing the feature code.
8. Press **TALK** to call the prepended number.

Four-digit dialing

Your phone provides the option of dialing a number stored in the Internal Phone Book simply by dialing four digits. Enter any four consecutive digits of someone's phone number (for instance, the last four digits), then have your phone remember the rest of the number and dial it for you.

To place a call using four-digit dialing:


1. Dial any four consecutive digits of a phone number that you have stored in your Internal Phone Book. The stored phone number can be any length up to 32 digits.
2. Press **MENU** to display the Digit Dial menu.
3. Press **1** for 4-Digit Dial. The phone dials the phone number automatically.

Note: If your Internal Phone Book has more than one phone number stored that contains the four digits, "Wait" and the number of matching entries found displays momentarily. The display changes to show the first number containing the four digits entered. Scroll through the matching phone numbers to highlight the desired number, and then press **TALK** to be connected.

Pause dialing

When you call automated systems (like banking services), you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Internal Phone Book, separated by special characters called pauses.

There are two kinds of pauses that can be entered on your Sprint PCS Phone:




- ▶ **Hard pause** - A hard pause stops the dialing sequence until you press the  button.
- ▶ **Two second pause** - A two second pause stops the dialing sequence for two seconds and then automatically sends the remaining digits.

Your phone has two pause dialing methods: pause dialing from the Internal Phone Book (see “Pause dialing from a stored Internal Phone Book entry” on page 49) and manual pause dialing (see “Manual pause dialing” on page 50).

Note: Multiple two second pauses can be entered to extend the length of a pause. For example, two consecutive two second pauses cause a total pause time of four seconds. However, keep in mind that pauses count as digits towards the 32 digit dialing maximum.

Storing pauses in an Internal Phone Book entry

To store a number in your Internal Phone Book that contains pauses:

1. Enter the phone number you want to store (such as the bank’s teleservice phone number).
2. Press . More options display. Press  or  to enter the desired pause.

- ▶ Press **4^{GHI}** to enter a Hard Pause. The letter “p” displays in the number, meaning that a hard pause will occur at that point in the dialing sequence. Enter the digits that need to follow the pause (such as your account number).
 - ▶ Press **5^{JKL}** to enter a two second pause. The letter “T” displays in the number, meaning that a “Timed” pause will occur at that point in the dialing sequence. Enter the digits that need to follow the pause (such as your account number).
3. Store the number in your Internal Phone Book as you normally would by pressing the **OK/☒** key and following the screen prompts.

Pause dialing from a stored Internal Phone Book entry

Pause dialing from the Internal Phone Book is easy:

1. If you stored the number using a two second pause(s), simply dial the number from the Internal Phone Book. The phone transmits the number that follows the “T” pause two seconds after connection. “SENDING DTMF” flashes on the screen (the transmitted tones are audible).
2. If you stored the number using a hard pause(s), simply dial the number from the Internal Phone Book and wait for the appropriate prompt from the number you are calling (credit card number, bank account number, etc.). When prompted, press **TALK** to send the DTMF number that follows your hard pause. “SENDING DTMF” flashes on the screen (the transmitted tones are audible).

Manual pause dialing

To perform manual pause dialing without first storing the number in the Internal Phone Book, enter pauses manually using the Digit Entry menu during the dialing process.

To manually dial a number using a pause(s):



1. Enter the phone number of the service you want to call (such as a bank's teleservice phone number). For example, your bank's teleservice phone number might be an 800 number.
2. Press **MENU** to display digit dialing options.
3. Press the associated digit key to select an option:
 - ▶ Press **4.GHI** for a Hard Pause. The screen displays a "p" indicating a hard pause. Enter the number to be sent after the pause by pressing the digit keys, and then press **TALK**. After connecting, press **TALK** again to transmit the additional number.
 - ▶ Press **5.JKL** for a two Second Pause. The screen displays a "T" indicating a timed pause. The screen prompts for the number to be sent after the pause. You can enter multiple two second pauses. Enter the number to be sent after the pause by pressing the digit keys, and then press **TALK**. The phone transmits the number that follows the pause two seconds after connection.

Note: Storing a number is recommended if you plan to dial the number again in the future.

Sending your telephone number during a phone call

Your phone has the capability to send its phone number to another phone or service while on a call. This may be helpful for handset verification or automated system access. Your phone number is sent as DTMF tones.

To send your phone number while you are on a call:

1. Press  to access the In-Use menu options.
2. Press  to Send Tel#.
3. Your phone displays the message “SENDING DTMF” and the DTMF tones will be audible in the earpiece.

Audible alerts







Your phone will beep at you from time to time to let you know that certain things have happened. You can easily turn these beeps off or on. Following is a description and a simple procedure to turn them on or off.

Service alert

A service alert is two short beeps that sound when:

- ▶ The phone enters or leaves a service area.

To set the service alerts on or off:

1. Press  to display the Main menu.
2. Press  for Setup / Tool.
3. Press  for Sounds.
4. Press  for Alert.
5. Press  for Service.
6. Press the scroll keys to toggle between On / Off.
7. When the desired option displays, press  to save the setting.

Minute beep

You can set the minute beep option to sound an alert 10 seconds before each elapsed minute to remind you of the length of the current call.

To turn minute beep on or off:

1. Press **MENU** to display the Main menu in Standby mode before placing the call.
2. Press **8TUV** for Setup / Tool.
3. Press **1** for Sounds.
4. Press **5JKL** for Alert.
5. Press **1** for Minute Beep.
6. Press the scroll keys to toggle between On / Off.
7. When the desired option displays, press **OK/☑** to save the setting.

Display options

Your Sprint PCS Phone has several easy-to-use display options. These allow you to:






- ▶ Control when and how long your backlight is on.
- ▶ Define a personal greeting of up to 12 characters.
- ▶ Control the contrast of the display characters.
- ▶ Set the language (English or Spanish) used on your screen and spoken for voice dialing prompts.
- ▶ View the hardware and software versions of your phone.

Backlight control

You have several options for setting how the backlight operates. When the phone is closed, the backlight remains off, thus conserving battery power. When the phone is open, the length of time that the backlight remains on can be set.

Note: Remember that backlight use drains your battery faster.

To select backlight options:

1. Press  to display the Main menu.
2. Press  for Setup / Tool.
3. Press  for Display.
4. Press  for Backlight.
5. Press the scroll keys to scan menu options: Flip Open, 8 or 30 Seconds (after last keypress), or Off.
6. When the desired option displays, press  to save the setting.

Note: The Backlight options work the same as described above when the phone is attached to the optional hands-free car kit.

Personal greeting

Your phone comes with a greeting that reads “Sprint PCS”. This greeting displays in Standby mode. You can personalize this greeting with anything you want up to 12 characters. Here’s how to do it:

To modify your personal greeting:

1. Press **MENU** to display the Main menu.
2. Press **8TUV** for Setup / Tool.
3. Press **2ABC** for Display.
4. Press **2ABC** for Greeting. Your current greeting displays.
5. Enter a new personal greeting by pressing the alphanumeric keys on the keypad (press **CLR** to clear the default greeting, “Sprint PCS”). When entering your greeting, the phone defaults to alpha text (lower case) input mode. Press the **MENU** key for more text entry options.
6. Press **OK/☐** to save your personal greeting.

Contrast control

The contrast of your phones display can be easily changed. To change the setting or view the current setting:

1. Press **MENU** to display the Main menu.
2. Press **8TUV** for Setup / Tool.
3. Press **2ABC** for Display.
4. Press **3DEF** for Contrast.
5. Press the scroll keys to scan menu options: Highest, High, Med, Low and Lowest.
6. When the desired option displays, press **OK/☐** to save the setting.

Setting the language of your phone

Your Sprint PCS Phone can display all menus and messages in either Spanish or English; all verbal prompts will also be spoken by the phone in the selected language. It's quick, easy and very convenient for bilingual families or friends. Here's how to do it:

1. Press **MENU** to display the Main menu.
2. Press **8TUV** for Setup / Tool.
3. Press **8TUV** for Language.
4. Press the scroll keys to select English or Spanish.
5. When the desired option displays, press **OK/END** to save the setting. The change is immediate and affects all menus, screens and verbal prompts.



Displaying your phone's software and hardware versions

You can view the software and hardware versions of your phone. This feature is helpful if you need to call Sprint PCS Customer Care. Here's how to do it:

1. Press **MENU** to display the Main menu.
2. Press **8TUV** for Setup / Tool.
3. Press **2ABC** for Display.
4. Press **4GHI** for Version. Information about your phone's hardware and software displays.
5. Press **CLR** to return to the previous screen.

Displaying your phone's software and hardware version while in-use

You can view the software and hardware versions of your phone during a call. Here's how to do it:

1. Press  to display the Main menu.
2. Press  for Version. Information about your phone's hardware and software displays.

Ringer options









Your Sprint PCS Phone provides a variety of ringer options in the Sounds menu. These options allow you to customize your ringer type and ringer volume settings so that you can easily recognize when a certain type of call is coming in.

Ringer type setting for voice calls

This option enables you to set a unique ringer type for incoming voice calls. Also, incoming voice calls that have Caller ID can be distinguished from those that do not by selecting different ringer types.







In addition, you can set distinctive ring types for individual names stored in your Internal Phone Book. For more information on this see “Adding a Name Ringer” on page 76.

To set the ringer type for voice calls:

1. Press  to display the Main menu.
2. Press  for Setup / Tool.
3. Press  for Sounds.
4. Press  for Ringer Type.
5. Press  for Voice Calls.
6. Press  to set the ringer type for calls that have Caller ID info or  for calls without Caller ID info.
7. Press the scroll keys to scan nine ringer types and four melody tones. Each tone sounds as you scroll the options.
8. When the desired ringer type sounds, press  to save the setting.

Ringer volume setting for voice and data/fax calls

There are two ways to set the ringer volume for voice and data/fax calls:

- ▶ From Standby mode, press the volume keys until the desired volume is reached. The options are High, Med, Low, Vibrate, 1-Beep or Off.
- ▶ In the Main menu:
 1. Press  to display the Main menu.
 2. Press  for Setup / Tool.
 3. Press  for Sounds.
 4. Press  for Ringer Volume.
 5. Press  for Calls.
 6. Press the scroll keys to High, Med, Low, 1-Beep, Vibrate or Off.
 7. When the desired ringer volume setting displays, press  to save the setting.

Note: When ringer volume is set to “Off”, all sounds are muted including message notification tones. This is helpful in quiet environments like a business meeting.

Ringer type setting for message notifications

This option enables you to set a unique ringer type for incoming message calls. This means you can have distinct ringer types for Sprint PCS Voicemail notifications, numeric pages and Sprint PCS Wireless Web Messaging. (Sprint PCS Wireless Web Messaging notification may not be available at time of printing.)

To set the ringer type for voice calls:

1. Press  to display the Main menu.

2. Press **8^{TUV}** **8^{TUV}** for Setup / Tool.
3. Press **1** for Sounds.
4. Press **2^{ABC}** for Ringer Type.
5. Press **2^{ABC}** for Messages.
6. Press **1** for Voicemail, **2^{ABC}** for Page, **3^{DEF}** for Text or **4^{GHI}** for Wireless Web.
7. Press the scroll keys to scan nine ring types and four melody tones. Each tone sounds as you scan the options.
8. When the desired ring type sounds, press **OK/☑** to save the setting.

Ringer volume setting for message notifications

This feature enables you to select a unique ringer volume for incoming message calls. This volume setting applies to incoming Sprint PCS Voicemail notifications, numeric pages and Sprint PCS Wireless Web Messaging.

To set the ringer volume for message calls:

1. Press **MENU** to display the Main menu.
2. Press **8^{TUV}** for Setup / Tool.
3. Press **1** for Sounds.
4. Press **1** for Ringer Volume.
5. Press **2^{ABC}** for Messages.
6. Press the scroll keys to High, Med, Low, 1-Beep, Vibrate or Off.
7. When the desired volume setting displays, press **OK/☑** to save the setting.

Ringer type setting for your alarm

This option enables you to set a unique ringer type for your alarm.

To set the ringer type for the alarm:

1. Press **MENU** to display the Main menu.
2. Press **8^{TUV}** for Setup / Tool.
3. Press **1** for Sounds.
4. Press **2^{ABC}** for Ringer Type.
5. Press **3^{DEF}** for Alarms.
6. Press the scroll keys to scan nine ring types and four melody tones. Each tone sounds as you scan the options.
7. When the desired ring type sounds, press **OK/☑** to save the setting.

Ringer volume setting for your alarm

This feature enables you to select a unique ringer volume for your alarm.

To set the ringer volume for your alarm:

1. Press **MENU** to display the Main menu.
2. Press **8^{TUV}** for Setup / Tool.
3. Press **1** for Sounds.
4. Press **1** for Ringer Volume.
5. Press **3^{DEF}** for Alarm.
6. Press the scroll keys to select High, Med, Low or Off.
7. When the desired volume setting displays, press **OK/☑** to save the setting.

Ringer type setting for data/fax calls

This option enables you to set a unique ringer type for fax calls.

To set the ringer type for fax calls:

1. Press **MENU** to display the Main menu.
2. Press **8TUV** for Setup / Tool.
3. Press **1** for Sounds.
4. Press **2ABC** for Ringer Type.
5. Press **4GHI** for Data/Fax In.
6. Press the scroll keys to scan nine ring types and four melody tones. Each tone sounds as you scan the options.
7. When the desired ringer type sounds, press **OK/☐** to save the setting.

Ringer type setting for roaming calls

This option enables you to select a distinctive ringer type for incoming roaming calls (this feature is on by default).

To set a distinctive ringer for incoming roaming calls:

1. Press **MENU** to display the Main menu.
2. Press **8TUV** for Setup / Tool.
3. Press **1** for Sounds.
4. Press **6MNO** for Roam Ringer.
5. Press the scroll keys to choose Distinctive or Normal.
6. When the desired ringer type displays, press **OK/☐** to save the setting.




Voice memo

Your Sprint PCS Phone can record five separate voice memos. Each voice memo can be up to one minute in length. When recording, a 60-second timer displays and an alert sounds to indicate when recording time expires.

Note: The voice memo feature of your phone is intended to let you record information when a pencil and paper may not be available. Before using this feature to record any part of a conversation, you should make sure that the recording will not be made or used for any wrongful or unlawful purpose and that you have the consent of other parties to the call if required by law or under your service agreement. Under the laws of some states, for example, recording any part of a telephone call taking place in the state is illegal unless every person on the call consents to your making the recording. State and federal laws may impose serious criminal penalties, in addition to possible civil liability, for unlawful recording of a telephone call or for disclosure of an illegally recorded conversation. Check to be sure that your intended use of this feature will comply with all applicable laws before recording or playing back a telephone conversation.

Recording a voice memo

To record a voice memo in Standby mode:

1. Press and hold the  key on the side of the phone. The message “Recording” displays, along with the timer. You must continue to hold down the  key to record (recording is stopped when the key is released).
2. Record the voice memo by speaking into the microphone.
3. To stop recording, release the  key. A menu for the current voice memo becomes available.

- To save the voice memo with the default date / time stamp, press **END/⓪** or do nothing. Your phone will automatically save the voice memo stamped with the date and time after about one minute. Other options on the current voice memo include:
 - ▶ **1** for Add Label. The default label for a voice memo is the date / time stamp. You can create your own label using the alphanumeric keys. Just start entering your label and press **OK/☑** when you are ready to save it.
 - ▶ **2ABC** for Continue. Press and hold **B** to continue recording. You can add to the voice memo, but you must do it before you save the voice memo.
 - ▶ After a voice memo is stored, the memo cannot be appended or added to.
 - ▶ **3DEF** for Erase. Press **B** to erase the voice memo.

Reviewing a voice memo

To review a voice memo:

- Press **B** to display the Voice memo menu.
- Press **1** for Review. The phone displays the label for voice memo 1, begins to play voice memo 1 and displays a list of four reviewing options. All voice memos will play in order until you press **END/⓪**, **CLR** or select one of the following options:
 - ▶ Press **1** to replay the voice memo.
 - ▶ Press **2ABC** to immediately erase the voice memo.
 - ▶ Press **3DEF** to listen to the next voice memo.
 - ▶ Press **4GHI** to listen to the previous voice memo.
- After reviewing the voice memos, press **CLR** to return to Standby mode.

Voice-activated dialing

Your Sprint PCS Phone features voice-activated dialing. When on the Sprint PCS Nationwide Network, you can call up to 20 stored entries by speaking the name into the microphone.




Using the voice-activated dialing option requires that you first program the phone to recognize the name of the person you are calling.

Tips on recording names


- ▶ Avoid recording similar names phonetically. If you record a similar name to one that is already stored in a voice-dial memory, the phone requests another name.
- ▶ Avoid recording in a noisy place.
- ▶ Speak clearly and naturally.
- ▶ Avoid very long or very short names. Names with two to five syllables are recommended.
- ▶ If a voice dial entry does not properly connect, you may need to record the name and number again.

Programming the phone for voice-activated dialing

Programming your Sprint PCS Phone for voice-activated dialing is easy. The phone provides voice prompts and screen displays to guide you through the recording process. To program the phone for voice-activated dialing:


1. Press  to display the Main menu.
2. Press  for Voice Dial.
3. Press  for Record. The phone will prompt you to say the name you want to program.
4. Wait for the beep and then say the name. For best results, use names with at least two syllables, or use both a first

and last name. The phone stores the name as a “first” sample, and then prompts you to say the name again.

5. Respond to the prompt by repeating the name after the beep exactly as you did the first time. The phone stores the name as a second sample and then requests the phone number.
6. Enter the phone number on the key pad.
7. To store the phone number, press  . The number you entered displays, along with the notification “Recorded”. If the number you entered matches a name/number already stored in your Internal Phone Book, then the name also displays.
8. The screen then returns to the Voice Dial menu.




Note: For voice-activated dialing in hands-free mode, refer to the optional HFC600 hands-free car kit manual.




Setting-up voice-activated dialing

Voice-activated dialing is always on once you have programmed the phone to accept voice dialing entries. To place voice-activated dialing calls, press and hold  . Then say the name into the phone after you hear the voice prompt and the beep.

You can also initiate a voice dialing call by simply opening the flip, when this option is selected.


To change voice dialing setup options:

1. Press  to display the Main menu.
2. Press  for Voice Dial.
3. Press  for Set Active.
4. Press the scroll keys to toggle between options:

- ▶ **Talk Only:** Enables voice dialing by pressing and holding .
 - ▶ **Talk / Flip:** Enables voice dialing by pressing and holding  (when the phone is open), or by simply opening the flip.
5. When the desired option displays, press  to save the setting.




Placing a call using voice dialing

To place a call using voice dialing:

1. Press and hold  or open the phone (if set in the Main menu).
2. At the voice prompt, say the name into the phone.
 - ▶ The phone places the call if it recognizes the name.
 - ▶ If the phone does not recognize the name, it prompts for the name again.
 - ▶ If the phone is unable to recognize the name after two attempts, it says “The name cannot be recognized.” and the following message displays: “Cannot recognize name. Please check name.”. The phone returns to Standby mode automatically, and you can try the call again later.

Reviewing voice dialing entries

To review voice dialing entries:

1. Press  to display the Main menu.
2. Press  for Voice Dial.
3. Press  for Review. A list of your stored voice dial numbers display (the names also display if stored in the Internal Phone Book).

4. Press the digit key to select the desired entry or scroll to the desired entry and press **OK/☑**. The recorded name plays audibly. You can quickly scroll entries without having to listen to each one, or you can listen to them all as they play in order.
5. Press **CLR** to return to the previous screen.

Erasing voice dialing entries

To erase an individual voice dialing entry:

1. Press **MENU** to display the Main menu.
2. Press **7 PORS** for Voice Dial.
3. Press **2 ABC** for Review. A list of entries displays.
4. Press the digit key to select the desired entry, or scroll to the desired entry and press **OK/☑**. The recorded name plays audibly and you are prompted with “OK: Erase”.
5. Press **OK/☑** to erase that entry. To erase different voice dialing entry scroll to the entry and follow the prompts.

To erase all Voice Dialing entries:

1. Press **MENU** to display the Main menu.
2. Press **7 PORS** for Voice Dial.
3. Press **3 DEF** for Erase All. You are given a confirmation screen and a confirmation voice prompt.
4. Press **OK/☑** to erase all voice dialing entries or **CLR** to return to the previous screen.

Emergency dialing

You can place calls to 911 even if your phone is locked (see “Lock mode” on page 101).

Calling 911

1. Dial   .
2. Press .

Note: Even if your account is restricted, you can still dial 911, but no other emergency numbers.

IMPORTANT NOTICE! PLEASE READ!

Because of various transmission methods, network parameters, and user settings used to complete a call from your wireless phone, a connection cannot always be guaranteed.

Therefore, emergency calling may not be available on all wireless networks at all times.

DO NOT depend on this phone as a primary method of dialing 911 or for any other essential or emergency communications.

Remember to always turn your phone on and check for adequate signal strength before placing a call.

The Internal Phone Book


Your Sprint PCS Phone lets you store up to 229 numbers and names in the Internal Phone Book. Each entry can have up to 6 associated phone numbers. Each entry can contain up to 32 digits including pauses, with an associated name of up to 12 characters. Name entry is optional. Stored phone numbers can be categorized as one of the following - Home, Work, Mobile, Pager, Fax and No-label. You can even specify the memory location of your choice for each entry. Memory locations can be marked “Secret” preventing unauthorized people from seeing the telephone number.






Memory dialing shortcuts make it easy to call a stored phone number, see “Shortcuts to Memory Dialing” on page 80.

Viewing stored entries

You can locate and view your Internal Phone Book entries three different ways:

Viewing stored entries in one step

The  key allows you to view your entire Internal Phone Book in alphabetical order of the names (a-z).

1. Press the  key to access the Internal Phone Book alphabetically. When “NAME” displays, you can enter the first letter of the name you are searching for and the matching entries display. You may continue to enter additional entries to further refine the search.
2. Press  to scroll through your stored entries. You can scroll forward through your store entries by pressing  or scroll backward by pressing  You can also scroll forward and backward through your stored phone book entries by pressing one of the volume keys on the side of your phone. Press  to scroll by page.

- ▶ You can place a call by finding the name that you want to call using this One Step Internal Phone Book access and pressing the **TALK** key.

Finding stored entries by name












1. Press **MENU** to display the Main menu.
 2. Press **2_{ABC}** for Phone Book.
 3. Press **1** for Find Name.
- ▶ Stored names display in an alphabetical list.
4. Using the alphanumeric keys, enter the first character of the name that you want to find in your Internal Phone Book. The phone searches for and displays the first Internal Phone Book entry beginning with the character you entered. You can enter the second character of the name and your phone will display name entries beginning with the two characters you entered. You can also scroll through Internal Phone Book entries using the navigation keys.
 5. When you find your desired entry, make sure it is highlighted, and then press **TALK** to place a call, or **OK/☐** to edit the entry.

Finding stored entries by location






1. Press **MENU** to display the Main menu.
2. Press **2_{ABC}** for Phone Book.
3. Press **4_{GHI}** for Find Entry.
4. Press the corresponding digit keys to enter and display your desired location or use the navigation keys to locate an entry. Make sure it is highlighted and then press **OK/☐** to display the selected entry or **TALK** to place a call.

Storing phone numbers and names

To store phone numbers and names:













1. Press  to display the Main menu.
2. Press  for Phone Book.
3. Press  for Add New Entry.
4. The screen prompts for the phone number. (You can enter up to 32 digits.) Press the digit keys to enter the phone number. The number displays from left to right.
5. Press  to enter a hard or two second pause or press  for the next prompt.
6. Select a Label for your new entry, your choices are:
 - ▶ Press  Home
 - ▶ Press  Work
 - ▶ Press  Mobile
 - ▶ Press  Pager
 - ▶ Press  Fax
 - ▶ Press  No Label



The phone prompts for a name.

7. Press   to select <Add New Name> and create a new Internal Phone Book entry.
8. Enter the name at the screen prompt using the keypad and press  (The text entry mode default is Alpha, initial capitals).
9. To accept the displayed location, press  or to select another available location press the navigation keys to scroll to the desired location and press .


Adding a new phone number to an existing entry

To add a new phone number to an existing entry:

1. Press  to display the Main menu.
2. Press  for Phone Book.
3. Press  for Add New Entry.
4. The screen prompts for the phone number. (You can enter up to 32 digits.) Press the digit keys to enter the phone number. The number displays from left to right.
5. Press  to enter a hard or two second pause or press  for the next prompt.
6. Select a Label for your new entry, your choices are:
 - ▶ Press  Home
 - ▶ Press  Work
 - ▶ Press  Mobile
 - ▶ Press  Pager
 - ▶ Press  Fax
 - ▶ Press  No Label
7. At the “Name?” prompt, use the navigation keys to scroll to the Internal Phone Book entry that you are adding a number to. Press  to store the new phone number.





Note: If the desired memory location already contains an entry, the phone displays a message asking if you want to replace the current entry. To replace the entry, press  . To return to the previous screen and select another location, press  . You can only use each label one time for each stored name (for example, you can only have one number labeled Work for a name entry). Stored phone numbers must be unique. You can only store a particular phone number one time in anywhere in your phone book.

Shortcuts for storing phone numbers

You can store a phone number quickly by entering the number, and then pressing . Then follow the prompts to designate the label, name and entry. You can quickly save a number after an incoming or outgoing call. See below for “Storing phone numbers at the end of a call.”

Displaying my phone number



To display the phone number of your Sprint PCS Phone:

1. Press  to display the Main menu.
2. Press  for Phone Book.
3. Press  for My Phone#.
4. Press  to return to Standby mode.

Storing phone numbers at the end of a call

To store a phone number after ending a call:

Note: If the call was incoming, and Caller ID information was not available, then the store option will not be available.

1. Once you have pressed  to end your call, the screen displays the call time (length of call), phone number of the party (if available), and the “OK: Save” option.
2. To store the phone number, press . The procedure at this point is the same as “To store phone numbers and names:” on page 72.

Prepend a phone number

Your Sprint PCS Phone includes a Prepend feature. This feature lets you add a temporary prefix to telephone numbers stored in the Internal Phone Book (for example, to temporarily disable call waiting).

To Prepend a stored phone number:








1. Press **MENU** to display the Main menu.
2. Press **2^{ABC}** for Phone Book.
3. Press **1** to search stored entries by name or press **4^{GHI}** to search by number.
4. Press **MENU** to display options.
5. Press **4^{GHI}** to Prepend the number.
6. The screen displays “Prepending”. Use the digit keys to enter the calling prefix and then press **TALK** to place the call.

Adding a Name Ringer

You can associate one of 13 different ringers (four melodies and nine tones) to numbers stored in your Internal Phone Book. When you receive an incoming call from a number matching an entry in your Internal Phone Book, your phone will sound the associated ringer to announce the call.

Note: If the Caller ID information is not available for an incoming call, the Name Ringer option will not work.



















To add a Name Ringer to an Internal Phone Book entry:

1. Press  to display the Main menu.
2. Press  for Phone Book.
3. Press  to search stored entries by name or press  to search by number.
4. Press  to display options.
5. Press  to add a Name Ringer.
6. Your phone displays the current ringer setting. Use the scroll key to listen to available ringers and melodies.
7. Press  to save your ringer selection.

Changing Your Internal Phone Book

Editing Internal Phone Book numbers

Once you have stored a number in the Internal Phone Book you can easily change it. To change an Internal Phone Book entry:














1. From Standby mode, find the Internal Phone Book entry that you want to change by pressing the  key and then scrolling to the name. You can also access Internal Phone Book entries by pressing    to search stored entries by name or press    to search by number.
2. Press the  key to display the name and number.
3. Press the  key for options.
4. Press  for Edit. Your edit options display. If the number has been designated as Secret you are prompted to enter the Lock Code.
 - ▶ Press  to change the phone number.
 - ▶ Press  to change the name.
 - ▶ Press  to move the number to a different location.
 - ▶ Press  to make the number secret.
 - ▶ Press  to Set Speed Dial number.
5. Press  to save your changes. Press  or  to return to Standby mode.

Secret Internal Phone Book numbers

Your Sprint PCS Phone allows you to hide a confidential number so that only a person with your phone's lock code can view the number and name. To make a number secret, see the previous paragraph. When you have made the number secret, the phone will not allow anyone to view information on the number unless they enter your four-digit lock code.

Erasing Internal Phone Book entries

To erase an entry in the Internal Phone Book:

1. From Standby mode, find the Internal Phone Book entry that you want to change by pressing the  key and then scrolling to the name. You can also access Internal Phone Book entries by pressing    to search stored entries by name or press    to search by number.
2. Press the  key to display the name and number.
3. Press the  key for options.
4. Press  for Erase.
5. Press  to erase. Your phone will prompt you for confirmation. Press  to confirm and erase the Internal Phone Book entry and return to Standby mode, or press  to cancel the erase and return to the Internal Phone Book options menu.














The “Erased” notification displays along with the name, number, and location of the erased entry.

Erasing the Internal Phone Book

See “Erasing Your Internal Phone Book” on page 105.

Set Speed Dial






For each name entered in the Internal Phone Book, one of the programmed numbers should be designated as the speed dial number.

1. From Standby mode, find the Internal Phone Book entry that you want to change by pressing the  key and then scrolling to the name. You can also access Internal Phone Book entries by pressing    to search stored entries by name or press    to search by number.
 2. Press the  key to display the name and number.
 3. Press the  key for options.
 4. Press  for Edit.
 5. Press  for Set Speed Dial.
 6. Press  to Set Speed Dial. The message “Speed Dial Saved” displays. To cancel press  to return to the previous menu.
- ▶ To dial numbers using the “Speed Dial” functions please refer to “Dialing numbers from your Internal Phone Book” on page 80 (the next page).

Dialing numbers from your Internal Phone Book

Dialing numbers from your Internal Phone Book is quick and easy. There are six methods explained below.

Shortcuts to Memory Dialing

- Scroll to the number:** From Standby mode, press the  key to enter your Internal Phone Book list. Scroll until you find the desired person or number, and then press the  key.
- One-Touch Dialing:** Press and hold the associated digit key for the location (applies to memory locations 1 through 9).
- Two-Touch Dialing:** Press and release the first associated digit key, and then press and hold the second digit key (applies to memory locations 10 through 99).
- Three-Touch Dialing:** Press and release the first associated digit key, then press and release the second digit key, then press and hold the third digit key (applies to memory locations 100 through 229).
- Four Digit Dialing:** From the Standby mode, enter four consecutive digits of a stored number (for example, the last four digits of a number) and press  . If more than one entry exists press the  key to scroll through all entries.
- Speed Dialing:** From Standby mode, enter the number of the memory location, and press  .

Internal Phone Book services

Phone numbers for frequently used services are pre-programmed into your phone. The pre-programmed numbers are:

- ▶ for Sprint PCS Customer Care.
- ▶ for Directory Assistance.
- ▶ for Prepaid Calling Service.
- ▶ for Roadside Assistance.



To access these services:

1. Press to display the Main menu.
2. Press for Phone Book.
3. Press for Services.
4. Press the associated digit key to select an option:
 - ▶ For Customer Care, press and then to connect.
 - ▶ For Directory Assistance, press and then to connect.
 - ▶ For Prepaid Calling Services, press and then to connect.
 - ▶ For Roadside Assistance, press and then to connect.

Note: Although it is not programmed in the “Services” menu, you may check the status of your account (the number of airtime minutes used) by pressing . This is a free call.

Using your Internal Phone Book while your phone is In-Use




Your phone's Internal Phone Book functions are available while you are on a call and your phone is In-Use. To access your Internal Phone Book while your phone is In-Use:

1. Press the  key for In-Use menu options.
2. Press  for Phone Book. Select from the following functions:
 - ▶ 1: Find Name
 - ▶ 2: Add New Entry
 - ▶ 3: My Phone #
 - ▶ 4: Find Entry
 - ▶ 5: Services

Internal Phone Book functions are described in “The Internal Phone Book” beginning on page 70.

Calendar

Your Sprint PCS Phone features a Calendar to help you keep track of important dates and events, create To Do Lists, set a Count Down timer, check the time in another part of the world and perform numerical calculations.




To access your Calendar press   . Press the associated digit key to access one of the Calendar options or navigate to the option you want and press  to access that option. Calendar has the following options:





- ▶ 1: Today
- ▶ 2: Month View
- ▶ 3: Jump To Date
- ▶ 4: To Do List
- ▶ 5: Countdown
- ▶ 6: Alarm Clock
- ▶ 7: World Clock

Today




You can schedule up to nine events for the current day indicating each event's start and end time. You can even have your phone's Calendar alert you before an event is to start. Events scheduled for future dates automatically appear on your Today events schedule on that day.

Here's how to enter an event:









1. Press  to display the Main menu.
2. Press  for Calendar.
3. Press  for Today.





4. Enter your event information, you can enter up to 32 characters. For more information on Text and Symbol Entry refer to “Using Links” on page 116. The default entry mode is T9 word.
5. Press  to accept your entry.
6. Enter the Start Time and Date, and press .
7. Enter the End Time and Date, and press .
8. Set an alarm to notify you of your event by scrolling through the alarm options and pressing  to select your choice. Your Alarm options are: 10 minutes Before, 30 minutes Before, 1 hour Before, No Alarm and On Time.

To view an event:

1. Press  to display the Main menu.
2. Press  for Calendar.
3. Press  for Today.
4. Use the navigation keys to display all of an event’s information. If you have more than one event, use the navigation keys to display more events.






To Add, Edit or Erase Events:

1. Press  to display the Main menu.
2. Press  for Calendar.
3. Press  for Today. If you have more than one event scheduled for today, press the  key to scroll through your events.
4. To add a New Event for Today press  .
5. To Edit an Event, navigate to the Event to be edited and press  , then follow the prompts.




- To Erase an Event, navigate to the Event you want to erase and press  .
- Press   to Exit the Options menu.

Month View




Month View allows you to view in calendar format the current month, or a past or future month. In Month View, the current date is highlighted on the calendar. Days with scheduled events are underlined. When in Month View, the scroll keys work like this:

- ▶ The navigation key  scrolls down the Calendar by one week.
- ▶ The right/left keys   move right or left one day.
- ▶ To display the next or previous month, press   on the side of the phone.

Access Month View as follows:

- Press  to display the Main menu.
- Press  for Calendar.
- Press  for Month View.
 - ▶ Remember, the current date is highlighted.
 - ▶ Use the navigation keys to select the month and day.
 - ▶ Days with scheduled events are underlined.

To view a scheduled event, to add a new event or to edit or erase an event on your Calendar:

- Press  to display the Main menu.
- Press  for Calendar.
- Press  for View Month.

- ▶ The current date is highlighted.
 - ▶ Use the navigation keys to select the month and day.
4. Press **OK/☑** to display events for the selected day. If no events are scheduled for your selected day (the date is not underlined), your phone will automatically go to the New Event function.
 - ▶ If more than one event is scheduled for Today, use the navigation keys to view all events for the day you selected.
 5. Press **OK/☑** or **CLR** to return to the Calendar.
 6. Press **MENU** to display the Options menu. Choose what you want to do: New Event, Edit Event, Erase Event and Exit. All of these options work as described above.

Jump To Date

Jump To Date allows you to specify the calendar date you want to view. Once at your desired date you can enter, edit and erase events in your calendar.

Using Jump To Date:







1. Press **MENU** to display the Main menu.
2. Press **5JKL** for Calendar.
3. Press **3DEF** for Jump To Date.
4. Enter the date using the digit keys.
5. Press **OK/☑** to display the Calendar. The date entered above is highlighted.

You can add, edit or erase events as described earlier.





To Do List

Your To Do list can help you keep track of and prioritize the things you need to do. You can enter and prioritize up to 20 items on your To Do List.

Here's how to create a To Do List:

1. Press  to display the Main menu.
2. Press  for Calendar.
3. Press  for Add To Do.
4. Enter the item you need to do. To input text and characters refer to “Using Links” on page 116.
5. Press .
6. Enter the time and date and press .
7. Using the navigation keys, set the priority for a To Do List item. Your choices are High and Low.
8. Press  to save your prioritized To Do List item.










To view, edit, add or erase To Do List items

1. Press  for the Main menu.
2. Press  for Calendar.
3. Press  for To Do List.
4. Using the navigation keys find the To Do List item you want to change and press .
5. Press the digit key corresponding to the action that you want. Your choices are New Item, Edit Item, Erase Item and Exit.
6. Continue to add a new item, edit an existing item or immediately erase an existing item by following the prompts.

Count Down

Have you ever wanted to know how much time it takes you to do something, or how many minutes, hours, days and months until a special event? The Count Down option can help you answer these questions. You can create up to 5 Count Down timers using the Count Down feature in Calendar.

To enter a Count Down:

1. Press  to display the Main menu.
2. Press  for Calendar.
3. Press  for Countdown.
4. Press  to display options.
5. Press  to enter a New Item.
6. Enter the name of your new Count Down. To input text and characters refer to “Using Links” on page 116. Press  when complete. The default entry mode is T9 word.
7. Enter the date and time that you want to Count Down from or Count Down to. For example, if today’s date is November 23, 2000 and you want to know how many months, days and hours are left before 7:00PM February 14, 2001, enter the time 07:00PM and the date 02/14/2001.
 - ▶ Press the volume keys to toggle between AM and PM or, press  for AM or  for PM.
 - ▶ Count Downs can be entered for dates between the years 1980 and 2099.
8. Press  to save your new Count Down item.

To view, add, edit or erase a Count Down:

1. Press **MENU** to display the Main menu.
2. Press **5JKL** for Calendar.
3. Press **5JKL** for Countdown.
 - ▶ Count Down timers display in order of least amount of time passed since the Count Down was started, and least amount of time remaining until the specified date.
4. Press **MENU** to display available options. Press the key corresponding to the option you want or scroll to the option and press **OK/☑**. Your choices and their corresponding keys are:
 - ▶ **1** New Item
 - ▶ **2ABC** Edit Item
 - ▶ **3DEF** Erase Item (immediately erases the selected Count Down item).
 - ▶ **4GHI** Exit (return to the Count Down display screen).
5. Follow the prompts to complete adding or editing a Count Down.

Alarm Clock

Your Sprint PCS Phone has an alarm clock inside of it with three separate alarms. Each alarm can be set to go off one time or to go off daily at a time that you have programmed. Once you set an alarm, it is easy to change the alarm time or to turn it off.

To set the Alarm:

1. Press **MENU** to display the Main menu.
2. Press **5JKL** for Calendar.
3. Press **6MNO** for Alarm Clock.

4. Select the alarm you want to set by pressing **1**, **2^{ABC}**, or **3^{DEF}**.
5. Choose “Daily” or “No Repeat” for the alarm.
6. Enter the date and time for the alarm. Use the volume key on the side of the phone to select AM or PM, or press **2^{ABC}** for AM or **7^{PQRS}** for PM. Note that no date setting is available for a Daily alarm.
7. Press **OK/☑** to save the alarm setting. Your phone returns to the Alarm menu showing the date and time of each alarm that is set.

To edit or erase a programmed Alarm:

1. Press **MENU** to display the Main menu.
2. Press **5^{JKL}** for Calendar.
3. Press **6^{MNO}** for Alarm Clock.
4. Select the alarm you want to set by pressing **1**, **2^{ABC}**, or **3^{DEF}**.
5. In the Options screen, press **1** for Edit or **2^{ABC}** for Erase. If you choose Erase, the alarm is immediately erased and you are returned to the Alarm menu. You can also choose **3^{DEF}** (Exit) if you change your mind.
6. If you choose Edit, then choose “Daily” or “No Repeat” for the alarm, and enter the new date and time for the alarm. Use the volume keys on the side of the phone to select AM or PM or press **2^{ABC}** for AM or **7^{PQRS}** for PM.
7. Press **OK/☑** to save the new alarm setting. Your phone returns to the Alarm menu showing the date and time of each alarm that is set.

You can set the type of alarm ringer that sounds, see “Ringer type setting for your alarm” on page 61.

World Clock

Have you ever wanted to call a friend in another part of the world but wondered what time of the day it is there? To know what time it is before you call, use the World Clock function of the Calendar. World Clock tells you what time it is in twenty-four different time zones around the world along with one or more major cities, states, regions or countries in a time zone.

Checking the time in another city or country:

1. Press **MENU** to display the Main menu.
2. Press **5JKL** for Calendar.
3. Press **7 PQRS** for World Clock.
4. Use the **< * >** and **# >** navigation keys to find the current time in one of the following 24 time zones (time zones are identified by one or more cities, states, regions or countries in a time zone):









- San Francisco
- Chicago, Mexico
- Caracas
- Mid Atlantic
- London, Madrid
- Athens, Helsinki
- Abu Dabi
- Alma-ata
- Hong Kong, Beijing
- Guam, Sydney
- Wellington
- Honolulu, Hawaii
- Denver, Arizona
- New York, D.C.
- Buenos Aires
- Cape Verde
- Paris, Berlin
- Moscow
- Tashkent
- Bangkok, Jakarta
- Seoul, Tokyo
- Okhotsk
- Samoa, Midway
- Alaska

5. Press **CLR** to return to the Calendar or press **END/0** to return to Standby mode.

Calculator



You can perform calculations including addition, subtraction, multiplication and division on your phone.

To perform a calculation:

1. Press  to display the Main menu.
2. Press  for Setup / Tool.
3. Press  for Calculator.
4. Press digit keys to enter the first number in your calculation. Numbers can be up to 9 digits long.
 - ▶ Press  to enter a decimal point.
 - ▶ Press  to change the sign of a number to a negative (-).
5. Press  to set the operator for your calculation. Your choices are:
 - ▶ [+] addition
 - ▶ [-] subtraction
 - ▶ [x] multiplication
 - ▶ [/] division
6. Press digit keys to enter the second number of your calculation.
7. Press  to perform the calculation and see the result,
or
8. You can continue to perform calculations with the same operator or change the operator and continue your calculations. Every time that you change the operator, the previous calculation is performed and the result is displayed as the top number in the display.
9. Press  to perform the calculation and see the result.

Using your Calendar while your phone is In-Use

Your phones Calendar functions are available while you are on a call, and your phone is In-Use. To access your Calendar while your phone is In-Use:

1. Press the  key for In-Use menu options.
2. Press  for Phone Book. Select from the following functions:
 - ▶ 1: Today
 - ▶ 2: Month View
 - ▶ 3: Jump To Date
 - ▶ 4: To Do List
 - ▶ 5: Countdown
 - ▶ 6: Alarm Clock
 - ▶ 7: World Clock


Calendar functions are described in “Calendar” beginning on page 83.

Sprint PCS Voicemail

Setting up your Sprint PCS Voicemail box





Setting up your Sprint PCS Voicemail box provides access to voicemail messages.

To set up your voicemail box (you will be prompted to perform each of the following steps):


1. Press and hold  for at least two seconds.
2. Create your own pass code. Make sure you pick a number that you will remember.
3. Record your name.
4. Create a greeting that people will hear when they call you.
5. Choose whether to activate the One-Touch Access feature.

Reviewing Sprint PCS Voicemail messages

To review voicemail messages from Standby mode, use One-Touch Access (see below) or:

1. Press  to display the Messages menu.
2. Press  for Voicemail. The screen displays “Voicemail New”.
3. Press:
 - ▶  to listen to voicemail messages.
 - ▶  to reset the display icon for voicemail messages, if desired. (The system resets the counter automatically after you listen to all new messages.)

One-Touch Access to your Sprint PCS Voicemail box

Your phone allows you to have One-Touch Access to your voicemail box. This is done from Standby mode by pressing and holding  .



Messaging

Your Sprint PCS Phone receives three kinds of messages: voicemail, numeric pages and Sprint PCS Wireless Web Messages (also known as text message), (Sprint PCS Wireless Web message notification may not be available at time of printing).


Incoming messages

Your phone receives incoming messages in both Standby and Talk modes. When you are on a call and receive a message, your phone sounds a tone (this is to avoid ringing in your ear while you are trying to talk).

Receiving a message in Standby mode

When your phone receives a message in Standby mode, the ringer sounds (unless turned off), and the screen displays (“New Voicemail”, “New Text”, “New Page” or “New BrowserMsg”). The message indicator () displays for Voicemail messages, () displays for all other message types, and remains on the screen until you listen to the new voicemail message, or read the new wireless web message or numeric page.

Receiving a message while on a call

If you receive a new wireless web message or numeric page while on a voice call, a tone sounds and a message header displays. You can easily review the new message while on the call by just pressing  . Your call will not be disconnected, and you can ask the other party to wait while you review the message. If you are using the optional hands-free headset, then you can read the message while continuing your conversation.

Reviewing Numeric Pages and Sprint PCS Wireless Web Messages

When the message arrives, you can immediately review it by pressing **OK/☑**, or store the message for later review by pressing **CLR**. The Messages menu provides options for reviewing the sender's name, phone number, time / date stamp and the message.

Note: Sprint PCS Wireless Web Message notification may not be available at time of printing.

To review a stored (or old) numeric page, or Sprint PCS Wireless Web Message from Standby mode:

1. Press **OK/☑** to display the Messages menu. The number of new (unread) messages displays next to the associated message type in the menu.
2. Press **2_{ABC}** for Page/Text or **3_{DEF}** for Browser Msg. A list of messages displays. An exclamation point (!) next to an entry indicates an urgent message. A check mark (✓) next to an entry indicates that you have read the message.
3. Use the scroll keys to scroll the list of messages.
4. When the message displays, press **OK/☑** to review the message. While reviewing the message, the scroll keys operate like this:
 - ▶ Press **◀ *** to page up in the current message.
 - ▶ Press **# ▶** to page down in the current message.

Note: While reviewing a message, you can press **MENU** for more options. See “Message options” on page 98.

5. Press **CLR** to return to the previous screen.

Message options

The Messages menu provides a number of options while you are reviewing Sprint PCS Wireless Web Messages. You can return a call to the phone number in the message, save or erase the message, scroll to the next or previous message, or extract a phone number that is included in the message.

1. While reviewing a message, press **MENU** for options:
 - ▶ Press **1** for Talk (to call the phone number).
 - ▶ Press **2_{ABC}** to Save the number (if there is no Internal Phone Book match).
 - ▶ Press **3_{DEF}** to Erase the message.
 - ▶ Press **4_{GHI}** to review the Next message.
 - ▶ Press **5_{JKL}** to review the Previous message.
 - ▶ Press **6_{MNO}** to extract a phone number that was included by the sender of the message. If more than one number was included by the sender, a list of the numbers is presented to you, and you can extract the one you want.
2. Press **CLR** to return to the previous screen.

Note: If the message you are reviewing contains a phone number that is already stored in the Internal Phone Book:

- ▶ The Save option does not display, and the available menu options will be: (1) Talk, (2) Erase, (3) Next Msg, (4) Previous Msg.
- ▶ The message sender's name appears as stored in the Internal Phone Book.

Erasing individual messages

You can erase an individual Sprint PCS Wireless Web Message or numeric page after reviewing it.

To erase a text or numeric page:

1. Press **OK/☑** to display the Messages menu.
2. Press **2_{ABC}** for Page/Text.
3. Use the navigation keys to scroll to the message you want to erase.
4. When the message is highlighted, press **OK/☑**. The message header and body will display.
5. Press **MENU** for more options.
6. Press **3_{DEF}** to erase the message or **CLR** to return to the Messages menu.

Erasing all Page/Text or Wireless Web messages

You can erase all numeric page messages or all wireless web messages.

To erase all Page/Text messages or all Sprint PCS Wireless Web Messages:

1. Press **OK/☑** to display the Messages menu.
2. Press **4_{GHI}** for Erase.
3. Press **1** for Page/Text or **2_{ABC}** for Wireless Web.
4. A confirmation displays. Press **OK/☑** to erase all messages or **CLR** to return to the previous screen.

Message ringing

Your Sprint PCS Phone allows you to set a unique ring type for each type of incoming message: voicemail, wireless web or numeric page (see “Ringer type setting for message notifications” on page 59).

Message memory capacity



Your Sprint PCS Phone can store up to 100 messages, depending on the length of the messages. When message memory reaches 75% capacity, the screen displays “Memory is 75% full. Erase old messages.” At 100% capacity, the screen displays a text notification and rejects additional incoming messages until you erase the stored messages.

Messages and Lock mode

Incoming messages are received even when your phone is in Lock mode. The screen displays the time and date of the message, but you cannot access the message until the phone is unlocked.




Checking Messages while your phone is In-Use

Your phone’s messaging functions are available while you are on a call, and your phone is In-Use. To access your messaging functions while your phone is In-Use:

1. Press the  key for In-Use menu options.
2. Press  for Messages. Select from the following functions:
 - ▶ 1: Voicemail
 - ▶ 2: Page/Text
 - ▶ 3: Erase





Message functions are described in “Messaging” beginning on page 96.

Your phone's security features

Your Sprint PCS Phone provides security options, including a user-programmable lock code and special phone number features. To access the Security menu in Standby mode, press  ,  and then enter the four-digit lock code (normally the lock code is the last four digits of your Sprint PCS Phone Number). Press the associated digit key to access one of the following Security options:

1. Lock phone
2. Change the lock code
3. Program special numbers
4. Erase your Internal Phone Book
5. Reset phone

Lock mode

Locking the phone limits all outgoing calls except calls to the three hard-coded emergency numbers (911, *911 and #911), the three user-programmable special numbers, and the Sprint PCS Customer Care number (which is:  , , ).

You can lock the phone manually during use, or set the phone to lock automatically when it is turned on. When the phone is in Lock mode, you can answer incoming calls, but you must unlock the phone to place outgoing calls (except to emergency and special numbers).

Lock code setting

The default lock code for your Sprint PCS Phone is generally 0000 or the last four digits of your phone number. You can enter a personal lock code and later change the lock code as often as you like.

To enter a new lock code:

1. Press **MENU** to display the Main menu.
2. Press **8^{TUV}** for Setup / Tool.
3. Press **4^{GHI}** for Security and enter your current lock code.
4. Press **2^{ABC}** for Change Lock. The current lock code displays.
5. Enter a new, four-digit lock code by pressing the digit keys.
6. Press **OK/☐** to save the new lock code or **END/Ⓣ** to exit.

Note: Your phone does not allow viewing of the lock code unless you know the lock code (this is for obvious security reasons). So, if you change the lock code, be sure to write down the new code and keep it for your reference.


Locking the phone

The Security menu allows you to lock the phone manually or automatically when powering on your phone or to leave the phone unlocked.

To lock the phone:

1. Press **MENU** to display the Main menu.
2. Press **8^{TUV}** for Setup / Tool.
3. Press **4^{GHI}** for Security and enter your current lock code.
4. Press **1** for Lock Phone.
5. Press the scroll keys to select an option:




- ▶ **Unlocked:** The phone remains unlocked.
- ▶ **Lock Now:** The phone locks immediately and stays locked until the lock code is entered.
- ▶ **On Power-Up:** The phone locks automatically the next time your phone is powered on and stays locked until the lock code is entered.

6. Press  to save the setting.

Dialing in Lock mode

You can place calls to emergency and special numbers in Lock mode. To place normal outgoing calls in Lock mode, enter the lock code to unlock the phone, and then dial the phone number.

To place an outgoing call in Lock mode:

- ▶ To call an emergency or special number, enter the number and then press .
- ▶ To place normal outgoing calls, press  to display the lock code screen, and then enter the lock code. When the Standby screen displays, enter the phone number, and then press .

Special numbers

Your Sprint PCS Phone provides the option of storing three special numbers. Each special number can be up to ten digits long.

All three special numbers can be manually dialed at any time even when your phone is locked. This can be a useful feature for controlling what numbers can be dialed from your phone.

Storing special numbers

To store special numbers:

1. Press **MENU** to display the Main menu.
2. Press **8^{TUV}** for Setup / Tool.
3. Press **4^{GHI}** for Security and enter your current lock code.
4. Press **3^{DEF}** for Special #.
5. Press **1** , **2^{ABC}** or **3^{DEF}** to select a location for the special number.
6. Enter the special number by pressing the digit keys. Special numbers can be up to ten digits long.
7. Press **OK/☑** to save the number in the selected location.

Dialing special numbers in Lock mode

To dial special numbers in Lock mode:

1. Enter the special number by dialing it as you normally would using the digit keys.
2. Press **TALK** to place the call.

Resetting your phone

Resetting the phone returns all setup options to the factory default settings. All of your important personal data (Internal Phone Book, Voice Dial recordings, Voice Memos, Messages, Call Logs and Calendar) are not affected by resetting your phone.

To reset the phone:

1. Press **MENU** to display the Main menu.
2. Press **8^{TUV}** for Setup / Tool.
3. Press **4^{GHI}** for Security and enter your current lock code.
4. Press **5^{JKL}** for Reset Phone. A confirmation displays explaining that you will reset the phone to factory defaults.

5. Press **OK/☑** to reset the phone or press **CLR** to cancel the operation.
6. The phone reboots (turns itself off and back on), restores the default settings, erases your messages and then returns to Standby mode.

Erasing Your Internal Phone Book

You can erase all the numbers stored in your Internal Phone Book. This is useful if you want to give your phone to a friend or family member. Here's how to do it:

1. Press **MENU** to display the Main menu.
2. Press **8TUV** for Setup / Tool.
3. Press **4GHI** for Security and enter your current lock code.
4. Press **4GHI** for Erase Phone Book. A confirmation message displays explaining that you will erase the entire Internal Phone Book.
5. Press **OK/☑** to erase the Internal Phone Book or press **CLR** to cancel the operation.
6. "Erasing Phone Book" displays first and when the operation is complete "Phone Book Erased" displays. The phone then returns to Standby mode.

Keeping track of your calls

Your phone does a great job of telling you about its calling activity and lets you easily return these calls.

Your phone retains these three lists in memory:

- ▶ Incoming - the last 10 calls placed to your phone.
- ▶ Outgoing - the last 10 calls placed from your phone.
- ▶ Missed - the last 10 calls placed to your phone that you did not answer.

Each entry in the three lists is referred to as a Call Log. Each Call Log contains the name and phone number (if available), and a time/date stamp. In case of duplicate entries back-to-back, the phone consolidates those logs and stores only the most recent call from or to the same number.

You can also erase your call log lists easily (see “Erasing Call Logs” on page 107).

In addition to Incoming, Outgoing and Missed lists, your phone maintains two airtime logs. See “Reviewing airtime” on page 108 for information on this useful feature.

Reviewing Outgoing, Incoming or Missed Calls

When displaying a Call Log, press **TALK** to be immediately connected.

1. Press **MENU** to display the Main menu.
2. Press **1** for Calls.
 - ▶ Press the associated digit key to select an option:
 - ▶ Press **1** for Outgoing calls.
 - ▶ Press **2_{ABC}** for Incoming calls.
 - ▶ Press **3_{DEF}** for Missed calls.

3. When the list of calls displays, press the scroll keys to scan the logs. The time / date stamp displays for each log. If there is an Internal Phone Book match, the name displays. If there is not an Internal Phone Book match, only the phone number displays.
4. When a log is highlighted you can press:
 - ▶ **TALK** to be connected to that party.
 - ▶ **OK/☒** to review information available on that call (name and phone number (if available) and time/date stamp). When you are viewing this information you can press **MENU** for more options (talk, save to your phone book, or prepend the number).
5. Press **CLR** to exit the Call Logs list and return to the previous screen.

Erasing Call Logs

You can erase any of the three lists (Outgoing, Incoming or Missed calls) or you can easily erase all three lists at once. Here's how to do it:

1. Press **MENU** to display the Main menu.
2. Press **1** for Call Logs.
3. Press **4^{GHI}** for Erase History.
 - ▶ Press the associated digit key to select an option:
 - ▶ Press **1** for Outgoing calls.
 - ▶ Press **2^{ABC}** for Incoming calls.
 - ▶ Press **3^{DEF}** for Missed calls.
 - ▶ Press **4^{GHI}** for Erase History.
4. Press **OK/☒** to erase or press **CLR** to cancel the operation and return to the previous screen.

Reviewing airtime

Your phone records (or logs) the amount of airtime or talk time used. There are two airtime measurements.






- ▶ A “Total” measurement that lists the number of calls made to or from your phone, and the total time in hours and minutes for these calls. This airtime measurement can easily be erased by you at any time and therefore is convenient for estimating your usage on a daily, weekly, monthly, etc. basis. **This feature is not intended for billing purposes.**

Note: The timer rounds each call up to the next minute.

- ▶ A “Lifetime” measurement that shows (in hours and minutes) the total time spent on all calls (incoming and outgoing) since your phone was placed into service. This airtime log is kept for historical and maintenance reasons and cannot be erased. **This feature is not intended for billing purposes.**

Note: The timer rounds each call up to the next minute.

For airtime measurement options:

1. Press  to display the Main menu.
2. Press  for Calls.
3. Press  for Air Time.
4. The following four options are available:
 - ▶ Press  for last Call. The screen displays the date and time of the last call along with the number of minutes and seconds.
 - ▶ Press  Total. The screen displays the total number of calls and the total airtime for all calls since you set this

total to zero (by using the “Erase Total” option). Press **CLR** to return to the previous screen.

- ▶ Press **3_{DEF}** for Erase Total. Press **OK/☒** to erase the “Total” airtime measurement, or press **CLR** to cancel the operation and return to the previous screen.
- ▶ Press **4_{GHI}** for Lifetime. The screen displays the total airtime (in hours and minutes) of every phone call that has been made to or from your phone.

Keeping track of your calls while your phone is in-use

You can view the incoming, outgoing and missed calls logs on your phone while you are on a call. Additionally, you can erase the call log history and display and erase air time information while your phone is in use. Here’s how to do it:


1. Press **MENU** to display the Main menu.
2. Press **4_{GHI}** for Calls. The following options are available:
 - ▶ 1: Outgoing
 - ▶ 2: Incoming
 - ▶ 3: Missed
 - ▶ 4: Erase History
 - ▶ 5: Air Time

Call tracking functions are described in “Keeping track of your calls” beginning on page 106.

The Sprint PCS Wireless Web Browser

Your phone comes equipped with a browser which makes it possible for you to use the Sprint PCS Wireless Web.

The Sprint PCS Wireless Web Browser allows you to access up-to-the-minute information through your Sprint PCS Phone. View specially designed text versions of popular Internet sites including Yahoo![®], CNN MobileSM and even The Weather Channel[®]. Browsing the wireless Internet through your phone is unlike using your computer in that site providers have selected only the critical aspects of their site to present to wireless phone users and have removed most graphics.






Each time you launch the Sprint PCS Wireless Web Browser, the phone will connect to the wireless Internet through the Sprint PCS Wireless Web and the service indicator icon () will appear on the display. Any time the service indicator icon is visible on the display, you are connected to the Sprint PCS Wireless Web and will be invoiced accordingly. Rates will vary according to your service option.

The Sprint PCS Wireless Web will end the connection after a certain period of network inactivity and will automatically re-connect as necessary. For this reason, you may find that you are charged for several network connections within a single session. This is normal and is designed to minimize your invoice.



The Sprint PCS Wireless Web Start and End Prompts

Each time you launch the Sprint PCS Wireless Web Browser a reminder displays that you will be charged for the connection time. If you wish to disable this reminder when it appears, follow the steps below:

1. Press  to display the Main menu.
2. Press  for Setup/Tool.
3. Press  for Wireless Web.
4. Use the scroll keys to select one of the four options:
 - ▶ Prompt None (You will never see the prompt.)
 - ▶ Prompt To Start (The default setting. You will see the prompt when you enter the browser, but not when you exit it.)
 - ▶ Prompt Both (You will be prompted when you enter or exit the browser.)
 - ▶ Prompt To End (You will see the prompt only when you exit the browser.)
5. Press  to save your setting or  to cancel.

Launching the Sprint PCS Wireless Web Browser

Note: The first time you use the Sprint PCS Wireless Web Browser, you will be required to go through a security setup process that takes approximately three to five minutes. Please follow the on-screen prompts to complete the security setup process. This initial setup process occurs only the first time you access the service. It may take up to 24 hours after your phone is activated for your Browser to be activated.

To launch the Sprint PCS Wireless Web Browser:

1. From Standby mode, press **MENU** **6MNO**. Your Sprint PCS Phone will access the Sprint PCS Wireless Web.

Note: A reminder of the charge will appear. Using the soft keys, simply answer yes (**OK/☑**) or no (**MENU**).

2. Once connected, the Home page (or the last page visited) will be displayed. To access the Home menu page from any other menu in the Sprint PCS Wireless Web, press and hold **CLR**. An example of a Home Page is shown below:

Home Page

- 1 ▶ Sprint PCS
- 2 Yahoo!
- 3 Weather
- 4 Portfolio
- 5 More Internet

3. What appears on the display when accessing the Sprint PCS Wireless Web is dependent on the service provider content. To view additional text, use the scroll keys.

Ending a Sprint PCS Wireless Web Browser Session

Simply press **END/⓪** to exit the Sprint PCS Wireless Web session. If the "Prompt to end" or "Prompt both" option is set in the Sprint PCS Wireless Web setup (**MENU** **8TUV** **7PQRS**), you will be prompted whether you want to end the Sprint PCS Wireless Web session.

Navigating the Sprint PCS Wireless Web Browser



When you use the Sprint PCS Wireless Web Browser, some keys on your phone operate differently than during a normal phone call. These keys are explained below. The Browser presents on-screen items in one of the following ways:

- ▶ text or numeric input
- ▶ links (embedded in content)
- ▶ numbered options (some options may not be numbered)
- ▶ simple text



You can act on the options or links by making use of the soft keys. The soft keys (**OK/Message** and **MENU**) are located below the bottom line of the display.

The Sprint PCS Wireless Web Browser soft keys

At the bottom of the Browser display is a solid bar which contains browser commands. “Soft” keys ( and ) below the solid bar are used to execute the commands. These two keys are called soft keys because their function changes depending on where you are in the Browser software.

Here’s how the keys work in the Browser:



1. **Volume Keys:** These keys performs several functions:



- ▶ Allow you to scroll up or down by a page.
- ▶ Press and hold the up key for one second to back up one level in the browser.
- ▶ Press and hold the down key for one second to go to your home page.



2. **OK / Messages Key:** This is the left soft key. The left soft key is used primarily for selecting the highlighted item, but its function may change depending on what you are doing (see “The Sprint PCS Wireless Web Browser soft keys” on page 114).



3. **TALK Key:** Press this key to receive a call while in a Browser session. For more information on this feature see “Receiving a phone call while using the Sprint PCS Wireless Web Browser” on page 116.











4. **Numbered Keys 0 - 9:** If the items on a page are numbered, you can use these keys to select them.



5. **Asterisk Key:** Press to scroll backward through options and when entering text.




6. **Pound / Space Key:** This is the space key. Press to insert a space when entering text or to scroll forward through menu options.

-  7. **0 / Next Key:** Enters a 0. The Next key moves to the next word in T9 text entry mode.
-  8. **CLR Key:** This key performs two functions:
- ▶ Backs you up in the Browser. Pressing it once backs you up one page. Pressing and holding it backs you up to the Home page.
 - ▶ Clears out entered text or numbers. When entering numbers or text, press  to clear the last number, letter, or symbol. Press and hold  to completely clear the input field.
-  9. **END Key:** Exits the Browser session and returns the phone to Standby mode.
-  10. **MENU Key:** This is the right soft key. The right soft key is used to access secondary options, or a menu of secondary options. This key is also used to change text entry modes when entering text.
-  11. **Up/Down Left/Right Navigation Keys:** Use the navigation keys to scroll to and select Browser options. The currently selected option is indicated by “▶”. You can also use the navigation keys to move the cursor when editing text. When entering text press  to change text entry options for the indicated text entry mode.
- 
- 


Using Links

Links have several purposes, including jumping to a different page, jumping to a different site or even initiating a phone call from some sites. Links are shown inside of brackets ([]), and you can normally use the left soft key to select a link when it is highlighted.

Initiating a phone call while using the Sprint PCS Wireless Web Browser

You may initiate a phone call from the Sprint PCS Wireless Web if the site you are using supports this feature (the phone number may be highlighted and the left soft key will appear as "Call."). In most cases, you can also use the  key to call the number. The Browser connection will be terminated when you initiate the call. After you end the call, your phone will return to Standby mode.


Receiving a phone call while using the Sprint PCS Wireless Web Browser

You can receive phone calls while in a wireless web session. During a wireless web session, your phone and your service provider pass information back and forth in packets, this is done for efficiency and it reduces your service access cost. Your phone is connected to the service provider only during the exchange of a packet; the Service Indicator will be present when a packet is being exchanged. Your phone stores this information contained in a packet in memory for you to use. Whenever packets of information are not being exchanged, your phone can receive calls. To answer a call while in the Sprint PCS Wireless Web Browser press  . When you complete your call, you are automatically returned to your wireless web session where you were when you answered your call.


Using Bookmarks

You can bookmark many individual pages for easy access at a later time. Bookmarks save you time by reducing the number of steps it takes to access a desired page.

Creating a Bookmark

1. Go to the page that you want to mark.
2. Press and hold . A list of options appears.
3. Select Mark Site.
4. If the page has a title, it will be automatically used for the name of the bookmark. You can also change the bookmark name. Selecting Save will save the name and add the page to your list of bookmarks.
5. A message will appear confirming that the bookmark was added to the list. Select OK to return to the screen that you marked to resume navigation within the Browser.
6. The new bookmark is added to the bottom of your bookmark list.

Finding a Bookmark

1. From the Home Page, select Bookmarks.
2. Select the bookmark you want and press .

Or


1. From the Home Page, press and hold the number associated with the bookmark in the bookmark list.

Entering text, numbers or symbols





At various times when using your phone, you will need to enter text. For example, when storing a name in the Internal Phone Book or entering events in your Calendar.

When prompted to enter text, the current text entry mode will appear on the right soft key in the lower right hand side of the display. There are five text entry modes:

- ▶ T9® Word
- ▶ Alpha
- ▶ Num
- ▶ SYM1
- ▶ NUM

To change the Input Mode, press the  soft key.

When entering text, use the indicated key to perform the following text entry functions:

- ▶ press  to change the text entry case (All CAPS, Initial Caps or lowercase).
- ▶ press  to cycle through candidate T9 words matches.
- ▶ press  to insert a space.
- ▶ Press  to enter a period (.).




Alphabetical Text Entry


Alphabetical text characters may be entered in the alpha Input Mode by pressing the key corresponding to the letter that you want to enter. Press the same key repeatedly to change between the characters represented by each key.

Numbers and Symbol Entry

Numbers and symbols are entered by changing to the appropriate Input Mode and pressing the soft key for the symbol you want or the digit key of the number you want.

T9[®] Text Entry

T9 word, T9 Text Input, enables you to easily enter text. T9 (for “text on 9 keys”) requires only one key press per letter and quickly recognizes the most commonly used word of a numeric sequence. For example, to enter the word “hello,” you can spell out the word by pressing only five keys, 4-3-5-5-6. T9 Text Input knows the most commonly used sequence for that numeric sequence is “hello”. If two or more words share the same numeric sequence, T9 software provides the most commonly used word, with the ability to scroll to the next most commonly used word by pressing the . Press  repeatedly to display all of the available words that T9 knows. When the word you want displays continue to enter text in the same way or change to another text or character entry mode. If the word you want to enter is not known by T9 press  to change the Input Mode.

You can easily change the entry case of T9 by pressing  until the entry case that you want displays. The T9 text entry case options display as follows:

- ▶ T9 WORD — All capital letters (all upper case).
- ▶ T9 Word — Initial capital letters (first letter is upper case).
- ▶ T9 word — All lower case (no capital letters).

Sprint PCS Wireless WebSM Connection

Now you can use your laptop PC, handheld or palm-sized computing device to send and receive e-mail, access the Internet or your company's network and more, without searching for a wall-mounted telephone jack.

When connected to a computing device (laptop, desktop, handheld, palmtop, etc.) running Microsoft[®] Windows[®] 95, Windows[®] 98, WindowsNT[®], WindowsCE[®], PalmOS[®] and other operating systems, your Sprint PCS Phone functions just like a typical computer modem on your PC, enabling you to use wireless data involving a wide variety of Windows software applications. Refer to your data kit manual for instructions to set up your computing device.

Note: Your phone must be on the Sprint PCS Network to use Sprint PCS Wireless Web services.

Getting Started

- ▶ Purchase a Sprint PCS Wireless Web Connection Kit (sold separately).
- ▶ Connect your laptop PC to your Sprint PCS Phone by using the serial data cable. The cable adapter will connect to a handheld or palm-sized computing device.
- ▶ Use the CD-ROM to install the Sprint PCS DialerSM software onto your computer. It only takes a few minutes to install. See the user guide in the Sprint PCS Wireless Web Connection Kit for complete details on how to install and use this service.

Attaching the data cable

Before you install the Sprint PCS Dialer software on your computer, it is a good idea to attach the data cable to the computer and your Sprint PCS Phone.

1. Plug the smaller end of the data cable, with the release tab facing up, into the accessory connection of your phone.
2. Plug the other end of the data cable into the matching serial port on the back of your computer.

Installing the software

To begin making Sprint PCS Wireless Web connections, you will need to install the software from the CD-ROM that is included in your Sprint PCS Wireless Web Connection Kit.

The software is designed to take you through the installation process step by step. Please the software user guide for more detailed information on installation.

Placing a call

1. Make sure the data cable is connected properly.
2. Open the application on your computer, and place the call through the application on your computer. The phone will display the number your computer is calling. You will see "CONNECTING".

Note: Your phone will automatically redial three times (or until it is successful). If the call is not connected after three tries, the display will return to Standby mode.

Reading the Display

Once the call is successfully connected, your phone's display shows transmission information.

During the call

Caller ID

Your phone stores the numbers of incoming Sprint PCS Wireless Web Connection calls with your voice Caller IDs. To let you know which is which, you will see “Data” or “Fax” along with the number of the caller when viewing your Caller IDs.

Accessing Features

While connected on a Sprint PCS Wireless Web Connection call, you can still access most features. You can navigate the phone’s menu system to change or view your phone’s features or Phone Book entries or read messages or Caller IDs that you received before placing the call.

Call Waiting

If someone tries to reach you during a Sprint PCS Wireless Web Connection call, your phone will behave like it is turned OFF (depending on your service, callers will probably get your voicemail). If you subscribe to Call Waiting, it will automatically be deactivated whenever you place or receive a Sprint PCS Wireless Web Connection.





Receiving a call

When you have an incoming fax call, your phone’s display will show what type of call you are receiving, along with the number of the caller. If the number matches an entry in your Internal Phone Book, the name will also be displayed.

If you select Auto Answer mode, your phone will automatically answer Sprint PCS fax calls when the data cable is connected.

Receiving a fax call

Note: Your phone must be on a digital network to receive or send faxes and data.





1. Ensure that your Sprint PCS Phone is connected to your computing device and is powered on.
2. Press  to display the Main menu.
3. Press  for Setup/Tool.
4. Press  for Data/Fax In.
5. Use the scroll keys to select “Incoming Fax Only”.
6. Press  to save the setting. The screen displays “No incoming voice calls can be received”. Your phone then returns to Standby mode and displays “* Fax Only *” above the greeting.

Note: Once you have set your phone’s mode to “Incoming Fax Only”, you cannot receive regular voice calls until you change back to “Voice”. See “Changing your phone back to voice calling” on page 124.

7. In the Fax program on your PC, setup the Answer mode. Click on “Receive” and select one of the following:
 - ▶ Automatic Receive (recommended)
 - ▶ Manual Receive

Your phone is now ready to receive an incoming fax.

Changing your phone back to voice calling

1. Press  to display the Main menu.
2. Press  for Setup/Tool.
3. Press  for Data/Fax In.
4. Use the scroll keys to select “Voice Call Only”.
5. Press  to save the setting. The screen displays “No incoming data/fax calls can be received”. Your phone then returns to Standby mode.

Ending a call

Some of the normal ways to end a call, like closing the phone will end a Sprint PCS Wireless Web call. Always close the connection through the application on your computer. Your phone will return to Standby mode. Disconnecting the data cable or turning off your phone will also end a wireless web call, but may disrupt your computer.

Sprint PCS Wireless Web Updates

Thanks to Sprint PCS Wireless Web Updates from content providers like Yahoo!, the information that's important to you is automatically sent to your phone at the times that you choose.

With Sprint PCS Wireless Web Messaging capability that's already available on every Sprint PCS Phone, you decide exactly which updates you want and when you want to receive them. Along with news headlines, you'll be able to receive weather reports, e-mail, sports scores, stock quotes and even horoscopes.

Signing Up:

1. Register at www.messaging.sprintpcs.com from your desktop or laptop PC.
2. Click on "Sign Up" and continue to fill in the required information.
3. Link to My Yahoo! to set up your home page.
4. Choose specific updates by checking the "activate" box and then click "edit" to choose your delivery times.

Note: You can always go back at any time to change your updates or delivery times. When you are finished selecting, your updates will begin arriving on your Sprint PCS Phone as a text messages.

Menus

Your Sprint PCS Phone includes both a Main menu and an In-Use menu.

Main menu



The Main menu in Standby mode contains eight primary options, all of which contain sub-menus (see “Your Phone’s Main menu” on page 128).

Talk or In-Use menu

These menu options are available in Talk or In-Use mode:

0. Version
1. Mute / (Un)Mute
2. Silent Key
3. 3-Way Call
4. Calls
5. Messages
6. Phone Book
7. Calendar
8. Send Tel#

Menu navigation

To access a menu option, press  and then press the scroll keys to scan menu options. Press the associated digit key to select the desired option. If you know the number of the option you want to select, simply press  and then press the associated digit key to select the desired option. (You do not have to scroll through the list or display an option in order to select it.)

Note: Closing the phone's flip will return you to Standby mode from any menu. Also, the phone will automatically return to Standby mode from any menu if you don't touch a key for 60 seconds.


Your Phone's Main menu

Main menu	Menu Level 1	Menu Level 2
1. Calls ⇌	1. Outgoing 2. Incoming 3. Missed 4. Erase History ⇌	1. Outgoing 2. Incoming 3. Missed 4. All Calls
	5. Air Time ⇌	1. Last Call 2. Total 3. Erase Total 4. Lifetime
2. Phone Book ⇌	1. Find Name 2. Add New Entry 3. My Phone # 4. Find Entry 5. Services ⇌	1. Customer Care 2. Dir Assist 3. Prepaid SVC 4. Road Assist
	3. Messages ⇌	1. Voicemail 2. Page/Text 3. Browser Msg 4. Erase
4. Roaming ⇌	1. Set Mode ⇌	↑ Automatic Sprint PCS ↓
	2. Call Guard	
5. Calendar ⇌	1. Today 2. Month View 3. Jump To Date 4. To Do List 5. Countdown 6. Alarm Clock 7. World Clock	
	6. Wireless Web ⇌	Wireless Web contents are controlled by Sprint PCS.
7. Voice Dial ⇌	1. Record 2. Review 3. Erase All 4. Set Active ⇌	↑ Talk only ↓ Talk / Flip
	8. Setup / Tool ⇌	1. Sounds ⇌
2. Display ⇌		1. Backlight 2. Greeting 3. Contrast 4. Version
	3. Data/Fax In 4. Security ⇌	1. Lock Phone 2. Change Lock 3. Special # 4. ErasePhoneBook 5. Reset Phone
	5. Call Answer 6. Auto Answer 7. Wireless Web 8. Language 9. Calculator	

Usage guidelines: All about performance and safety

Keeping tabs on signal strength

The voice quality of your phone will always be at its best when the antenna is not obstructed. If you're inside a building, reception may be better near a window.

The quality of each call you make or receive depends on the signal strength in your immediate area. When turned on, your phone will always give you a visual indication of the signal strength in your immediate area. The visual indicator is always in the upper left corner of your display and is referred to as the signal strength indicator: . More lines indicate more signal strength. Four lines indicate maximum strength and one line indicates least strength.

Understanding Power Save mode

If you're trying to use your Sprint PCS Phone in an area where the signal is too weak, the Power Save feature will automatically activate to conserve battery power when you've been unable to pick up a signal for 15 minutes. If your phone is on, it will periodically recheck service availability or you can do so yourself manually by pressing any key. A message will be displayed on the screen any time Power Save has been activated.

Understanding how your phone operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When your phone is in use, the system handling your call controls the power level. This product meets all FCC requirements for RF power output levels for this handset type.

Radio frequency safety

In 1991—1992, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industry developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted a hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

The design of the phone complies with these updated standards. Of course, if you want to limit RF exposure even further than the updated standard, you can choose to control the duration of your calls and operate your phone in the most power-efficient manner.

Observe the following RF safety precautions when using your phone:

- ▶ You should not touch the antenna unnecessarily when using the phone.
- ▶ Touching the antenna may affect the call quality and may cause the unit to operate at higher power than it would need otherwise.
- ▶ When using the handset, hold the handset just as you would hold any other telephone, and keep the antenna pointed up and over your shoulder.
- ▶ Use of hands-free devices will further limit RF exposure.

Emergency Calls

IMPORTANT NOTICE! PLEASE READ!

Because of various transmission methods, network parameters, and user settings used to complete a call from your wireless phone, a connection cannot always be guaranteed.

Therefore, emergency calling may not be available on all wireless networks at all times.

DO NOT depend on this phone as a primary method of dialing 911 or for any other essential or emergency communications.

Remember to always turn your phone on and check for adequate signal strength before placing a call.

Maintaining your phone's peak performance

To operate your phone properly — that is, to maintain safe and satisfactory service — you should follow these rules:

- ▶ Hold the phone with the antenna pointed up and over your shoulder.
- ▶ Do not hold, bend or twist the phone antenna at any time.
- ▶ Do not use the phone with a damaged antenna.
- ▶ Speak directly into the microphone.
- ▶ Avoid exposing your phone and accessories to rain or liquid!
- ▶ Only Samsung authorized personnel should service your phone and its accessories.

Using your phone while driving

IMPORTANT NOTICE! PLEASE READ!

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

You should never use a hand-held phone while driving. It may divert your attention away from the road and may be illegal in some states. You should park your vehicle legally before using your hand-held phone. Remember, safety comes first.

- ▶ Your hand-held phone should be stored in a secure place so that, in the event of a sudden stop or collision with another vehicle, the phone will not damage property or injure anyone. For example, airbags inflate very quickly and with great force. Serious injury may result if you have placed your phone in the area of deployment of an air bag and the bag inflates.

Following safety guidelines

To operate your phone safely and efficiently, you should always follow any special guidelines in a given area and turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Restricting children's access to your phone

Your phone should not be played with by children. They could hurt themselves and others, damage the phone or make calls that increase your Sprint PCS bill.

Turn off your phone before flying

You should turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air and require that your phone must be turned off.

Turn off your phone in dangerous or posted areas

You must turn off your phone in dangerous areas or any area where posted notices so require. For example, to avoid interfering with blasting operations, you should turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews use remote-controlled RF devices to set off explosives.

Turn off your phone when you are in any area with a potentially explosive atmosphere. It is rare, but your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; areas where the air contains chemical or particles such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

You must not store or carry your phone, its parts, or accessories in the same compartment or other area where there are flammable liquids, gases, or explosive or flammable materials.

Using your phone near other electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, some electronic equipment may not be shielded, or adequately shielded, from RF signals. RF signals from wireless telephones may affect such equipment.

RF signals from your phone may affect systems in your vehicle, including improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles (such as electronic ignition systems, electronic speed control systems, electronic anti-skid or anti-lock braking systems, and air bag systems). You should check with the manufacturer of your vehicle (and the manufacturers of any equipment added to your vehicle) to determine whether its systems are adequately shielded from external RF signals and to determine appropriate safety precautions.

You must consult the manufacturer of any personal medical devices (such as pacemakers and hearing aids) to determine if they are adequately shielded from external RF signals and the appropriate safety precautions to take with such devices. For example, safety instructions for pacemakers may include minimum distances that the phone should be kept from the pacemaker, areas where the phone should not be kept (for example, the breast pocket), use of the ear opposite the pacemaker, and other such safety instructions. The advice from the manufacturers may change from time to time. If at any time you suspect any such interference, turn off your phone immediately.

Turn off the phone in healthcare facilities and request permission before using the phone near medical equipment.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of hardware and can be broken. Use common-sense guidelines to avoid dropping, hitting, bending or sitting on it.

FCC notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the telephone if such interference cannot be eliminated.

Liquefied Petroleum Gas

Lastly, vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn.: Publication Sales Division.

Specifications Subject to Change

The information contained in this manual is believed to be correct at the time of printing, however, Samsung reserves the right to change or modify any of the specifications without notice or obligation to update existing units.

FCC Compliance Information

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Information To User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ 1. Reorient / Relocate the receiving antenna.
- ▶ 2. Increase the separation between the equipment and receiver.
- ▶ 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ 4. Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment

Battery and specifications

Protecting your battery

For best battery performance, you should follow these guidelines:

- ▶ Use your battery for its intended purpose only.
- ▶ Only use Samsung-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers will invalidate your warranty and may cause damage as well.
- ▶ You must never use a battery charger that is damaged in any way or worn out.
- ▶ To avoid damage, only charge the battery in temperatures that range from 32° F to 104° F.
- ▶ Do not use the battery charger in direct sunlight or in high humidity areas (such as a bathroom).
- ▶ When a battery charger is not in use, disconnect it from the power source.
- ▶ Never dispose of the battery by incineration (fire).
- ▶ Keep the metal contacts at the battery base clean.
- ▶ Do not attempt to disassemble or short-circuit the battery, as injuries or burns may result.
- ▶ You may need to recharge the battery if it has not been used for a long period of time.
- ▶ Replace the battery when it no longer provides acceptable performance. It can be charged hundreds of times before it will need to be replaced.

- ▶ Do not allow metal objects or liquids to contact or short-circuit the battery terminals, as injuries or burns may result.
- ▶ To avoid damage, do not store the batteries at temperatures below -4°F or higher than 185°F and avoid leaving the batteries unused for very long periods of time without periodic charging. Follow these storage rules:
 - ▶ Less than one month:
 -4°F to 140°F (-20°C to 50°C)
 - ▶ More than one month:
 -4°F to 113°F (-20°C to 35°C)

Note: Damage can occur to Lithium Ion (Li-Ion) batteries if left uncharged. Li-Ion batteries should not be left with a charge level below 30%. Fully charge your Li-Ion battery prior to storing and periodically recharge your Li-Ion batteries.

Battery disposal and recycling

You must follow these instructions when disposing of or recycling the battery:

- ▶ Do not dispose of the battery in a fire; the cell may explode. You must follow the regulations in your area regarding disposal of batteries.
- ▶ Do not open or puncture the battery; the released electrolyte is corrosive and may cause damage to the eyes and skin, and can be toxic if swallowed.
- ▶ Charge the battery in accordance with the instructions specified in this user guide. See “Charging the battery” on page 28.
- ▶ Return unwanted Samsung Lithium Ion batteries to your nearest Samsung Service Center. (Call toll free 1-888-987-HELP (4357) in the U.S.)

Sprint PCS Phone and battery specifications

Dual Band:	Single CDMA 1.9 GHz
Display Screen:	Graphical LCD (with 1 dedicated Icon Line)
Battery Type:	Slim: 550 mAh Lithium-Ion Standard: 1000 mAh Lithium-Ion Extended: 1600 mAh Lithium-Ion
PCS Antenna:	fixed length

Sprint PCS Phone with: **Slim Battery** **Standard Battery**

Dimensions (H x W x D):	4.1 x 1.8 x 0.7 inches 104 x 45 x 18.5 mm	4.1 x 1.8 x 0.8 inches 104 x 45 x 20.5 mm
Weight:	3.0 oz. (89 g)	3.8 oz. (109 g)
Volume:	87 cc	96 cc
Talk Time Digital:	up to 1.3 hours or	up to 3.2 hours or
Standby Time Digital:	up to 75 hours	up to 140 hours

Sprint PCS Phone with: **Extended Battery**

Dimensions (H x W x D):	4.1 x 1.8 x 1.0 inches 104 x 45 x 24.5 mm
Weight:	4.6 oz. (131 g)
Volume:	115 cc
Talk Time Digital:	up to 5.0 hours or
Standby Time Digital:	over 9 days

Index

911

911 · 69, 101, 131

A

access a menu option · 127

accessories · 17, 131, 133, 135

Connector · 17

desktop charger · 28, 29, 137

Extended Battery · 139

Headset · 13

Standard Battery · 139

Activating Service

activate your phone · 1

Active Flip · 18, 67

add digits · 46

Adjusting voice volume · 35

Airtime

Erase Total · 109

Lifetime · 108, 109

Reviewing · 106, 108

Total · 108, 109

Alarm · 61, 83, 84, 89, 90, 93

Clock · 83, 89-91, 93

Ringer volume setting · 59-61

silence the alarm · 15

Alerts

Minute Beep · 53

answer · 3, 16, 30, 33, 34, 40, 43,
88, 101, 106, 112, 116, 122

Answering a call · 18, 34

Answering a Call · 40

Any Key Answer · 34

Antenna · 22, 139

reception · 129, 136

Any Key Answer · 34

area codes · 46

Automatic hyphenation · 45

Automatic storage · 34

B

back up one menu level · 20

Backlight · 16, 18, 54

batteries · 29, 135, 137, 138

Battery · 23, 26, 137-139

disposal and recycling · 138

Extended · 139

performance · 137

Protecting your · 137

recharge · 137

Replace · 137

Slim · 139

specifications · 135, 137, 139

Standard · 139

storing · 138

strength · 23, 26

Using the · 27

Block Own Number · 39

Bookmarks · 117

C

Calculator · 92

Calendar · 83

Calculator · 92

Count Down · 83, 88, 89

Jump To Date · 83, 86, 93

To Do List · 83, 87, 93

Today · 83, 84, 86, 93

View Month · 85

call an emergency or special
number · 103

call automated systems · 48

call forwarding · 42

Call Guard (Roaming) · 38

call logs · 16, 32, 34, 46, 104

erasing · 106, 107

incoming · 13-15, 18, 20, 25,
33-35, 40, 42, 76, 101

Keeping track of your calls ·
106, 109

outgoing · 41

call quality · 39, 130

call time · 14, 33, 74

call waiting · 14, 16, 46, 75, 122

turn off Call Waiting perma-
nently · 40

Caller ID · 34, 39, 58, 74, 76, 122

Cautions · 135

CLR Key · 20, 115

back up one menu level · 20

correct a misdialed digit · 33

Correcting dialing mistakes · 33

erase one character · 20

erase one digit at a time · 33

Clock

Alarm · 61, 83, 84, 89, 90, 93

confidential number · 78

Correcting dialing mistakes · 33

customer service

Samsung Service Center · 138

Sprint PCS Customer Care · 1, 3, 11, 39, 40, 56, 81, 101

customize · 58

D

data · 59, 62, 104, 120-124

desktop charger · 28, 29, 137

desktop chargers · 137

Dialing · 32, 43, 44, 70, 79, 80, 103, 104

Four Digit · 80

in Lock mode · 103

One-Touch · 80

special numbers in Lock mode · 104

Speed · 32, 80

Three-Touch · 80

Two-Touch · 80

Digit Entry · 50

Dimensions · 139

direct sunlight · 137

Directory Assistance · 43, 81

Display · 14, 24, 54-56, 121, 139

Display indicators · 24

Software and hardware

version · 56, 57

top line of the display · 1, 14, 24, 30

your phone number · 2, 42

dropped calls · 43

DTMF · 45, 49, 51

E

earpiece volume · 35

electronic devices · 134

emergency · 69, 101, 103, 131

Emergency and Special Numbers
call an emergency or special
number · 69, 103

Emergency dialing · 69, 103

English · 54, 56

entering a phone number · 15

Entering text, numbers, or
symbols

alphabetical · 118

numbers and symbols · 119

T9 · 19, 84, 88, 115, 118, 119

erase

a Calendar event · 84-86

a Countdown timer · 88

a To Do list item · 87

a voice dialing entry · 68

alarm setting · 90

Internal Phone Book

entry · 78

call logs · 107

erase all · 20, 33, 71, 99, 105,
107, 128

erase all the digits at once · 33

one character · 20

one digit at a time · 33

messages · 99

numbers or characters · 20

the Internal Phone Book · 105

Total Airtime · 109

explosive atmosphere · 133

Extended Battery · 139

F

fade out · (see, signal fade)

failed call · 44

Fax · 62, 70, 72, 73, 122-124

Receiving a fax · 123

Find Entry · 46, 71, 82

flying · 133

G

Getting to know your phone ·
12-22

Greeting · 55

H

Headset · 13

help · 2, 3, 11, 43, 83, 87, 88, 136

high humidity areas · 137

I

incoming call · 13-15, 18, 20, 25,
33-35, 40, 42, 76, 101

incoming message calls · 59,
60

incoming voice calls · 58, 123

Indicator

LED · 116

interference · 13-136

Internal Phone Book · 2, 15, 17,
19, 21, 30, 32, 33, 34, 39,

42, 43, 46-50, 58, 66, 67, 70-
82, 93, 98, 101, 104, 105,

107, 118, 122, 126

Adding a Name Ringer · 58, 76

Find Entry · 46, 71, 82

make a number secret · 78

Phone Book services · 81

Internet · (see Sprint PCS Wire-
less Web)

K

Key beep volume setting · 44

keypad · 16

L

Last call · 35, 108, 128

Language · 54, 56

leave a Sprint PCS Service

Area · 39

LED indicator · 13, 23

links · 113

Liquid · 131, 133, 138

Lithium Ion (li-Ion) batteries · 27,
138, 139

lock code · 3, 78, 101-105

default lock code · 102

lock the phone · 101, 102

new lock code · 102

Lock Code Setting · 102

Lock Mode · 101

place an outgoing call in Lock
mode · 103

Locking the Phone · 102

long-distance charges · 37

M

Main Menu Structure · 128

make calls · 42, 132

Manual pause dialing · 48, 50

melody tones · 34, 58, 60-62

Memory · 32, 70, 80, 100

Menu · 127

access a menu option · 127

back up one menu level · 20

navigating a menu · 15

MENU Key · 21, 115

Messages · 15, 60, 94, 96-100,
104, 114, 126

incoming message calls · 59,
60

indicator · 25

kinds of messages · 96

Message indicator · 25

Messages and Lock
mode · 100

Messages Key · 15, 114

memory capacity · 100

numeric pages · 59, 60, 96, 97

Ringer type setting · 60

text messages · 60, 96, 125

Wireless Web · 59, 60, 96-100

Microphone · 18

Mute during a call · 18, 36

Mute during a conversation ·
36

Minute Beep · 53

Mode · 37, 118, 119

Mute the ringer · 15

N

- Name display with Caller ID · 34
- navigating a menu · 15
- Navigation key · 21, 115
- Navigation key · 21, 115
- network feature activation codes · 46
- North American Numbering Plan · 45

O

- Operating a motor vehicle · 132
- Operator Services · 44
- other CDMA networks · 36, 39
- Out of Range · 44
- Outgoing Calls Log · 41, 107
- outside the Sprint PCS Network · 36, 39

P

- Pages · 97
 - numeric pages · 59, 60, 96
- Pause Dialing
 - Manual pause dialing · 48, 50
 - pause dialing methods · 48
- peak performance · 131
- performance and safety · 129
- PhoneBook
 - see Internal Phone Book
- phone number displays · 32, 107
- Placing a call · 67, 121
 - place a three-way call · 41
 - place an outgoing call in Lock mode · 103
- Prepend dialing · 46
- Prepend Dialing
 - prepend existing phone numbers · 46
 - Prepend option · 46
- Protecting your battery · 137

R

- radio frequency · (see RF)
- Radio frequency safety · 130
- rain · 131
- Receiving a fax · 123
- reception · 129, 136

- recharge the battery · 137
- Redialing calls · 32
 - redial the last call · 32
- reentering a Sprint PCS Service Area · 39
- Resetting your phone · 104
- review · 64, 67, 94, 96-98, 107
- Reviewing Airtime · 107, 108
- RF · 129, 130, 133, 134, 136
 - RF exposure · 130
- Ring volume
 - Adjusting ring volume · 35
- Ringer · 25, 34, 35, 58-62, 76, 90, 99
 - Mute the ringer · 15
 - silence the ringer · 33, 35
- Roaming · 25, 37, 38, 62
 - Call Guard · 38
 - leave a Sprint PCS Service Area · 39
 - manual roaming · 37
 - roaming agreements · 36, 37

S

- Safety Considerations
 - Cautions · 135
 - explosive atmosphere · 133
 - flying · 133
 - Following safety guidelines · 132
 - performance and safety · 129
 - Radio frequency safety · 130
 - Operating a motor vehicle · 132
- Secret phone book numbers
 - make a number secret · 78
- Security · 2, 3, 101, 102, 104, 105
 - security features · 101
 - Security menu · 101, 102
 - numeric pages · 59, 60, 96
- Service · 1, 2, 24, 38, 39, 52, 81, 116
 - Service indicator · 24
 - service modes · 37
- signal fade · 43

Signal strength · 23, 24
Silent Key · 36, 126
Spanish · 54, 56
Special numbers · 103, 104
 call an emergency or special number · 103
 Dialing special numbers in Lock mode · 104
 Storing special numbers · 104
Specifications · 135
Speed Dialing · 32, 80
Sprint PCS Customer Care · 1, 3, 11, 39, 40, 56, 81, 101
Sprint PCS Wireless Web · 17, 19-21, 25, 32, 59, 60, 96, 97-99, 110-114, 116, 120-122, 124, 125
 Connecting · 20, 59, 60, 96, 97, 99, 110, 111, 112, 121, 122
Standard Battery · 139
Standby Time · 139
storing
 a phone number after ending a call · 74
 phone numbers and names · 72, 74
 special numbers · 104

T

TALK Key · 16, 35, 114
Talk Time · 139
temperatures · 137, 138
temporarily unblock · 40
text messages · 125
Three-Touch Dialing · 80
Three-Way Calling · 16, 41
Tone length setting · 45
 set tone length · 45
Turning your Sprint PCS Phone on and off · 23
Two-Touch Dialing · 80

U

unlock your phone · 1, 3

V

Version · 56, 57, 126
vibrate · 25
Vibrate · 33, 34, 59, 60
view your phone number from Standby mode · 2, 42
Voice calling experience · 39
Voice Memo · 14, 62, 104
 Recording · 63
 Reviewing · 64
 Voice Memo Key · 14
Voice volume
 Adjusting voice volume · 35
Voice-Activated Dialing
 erase all Voice Dialing entries · 68
 Tips on recording names · 65
voicemail box · 95
 set up your voicemail box · 94
Voicemail notifications · 59, 60
volume key · 34, 35, 59, 70, 88, 90
 Adjusting voice volume · 35
 earpiece volume · 35
 Key beep volume setting · 44
 Volume/Scroll Keys · 15

W

warranty · 28, 135, 137
Web Browser · (See also, SPrint PCS WIREless Web)
 bookmarks · 117
 commands · 114
 message · 96, 128
 using links · 17, 21, 84, 87, 88, 116
Weight · 139
Welcome · 10, 11
Where you can use your phone · 36
Wireless Web · (see Sprint PCS Wireless Web)